



# Gator Master Cross Reference

January 31st, 2013

\* Note This Page Not Formatted For Printing

Use Ctrl-F to search by Manufacturer or Model Number

Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
360 Systems	DR600		Digital Audio Gear	G-MULTIFX-1510	GXDF-1116-5-TSA	GXDF-1116-8-TSA	GU-1510-06-WPDF	GU-1711-06-WPDF
3M	S15		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
3M	S40		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
3M	S55		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
3M	WX20		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
3M	X20		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
3M	X21		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
3M	X26	051125633826	Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
3M	X40		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
3M	X45		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
3M	X50		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
3M	X55		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Access	VIRUS TI 61	889406177802	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Akai	MPC Studio	0825213002791	DJ Controller	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOUR MIX 10	G-TOUR MIX 12	
Akai	MPD18	825213002432	Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Akai	MPD32	825213002333	Digital Audio Gear	G-CLUB CONTROL	GX-1818-6-TSA	GXDF-1919-7-TSA	GU-1813-06-WPDF	G-TOURCARRYONFO
Akai	XR20	825213002326	Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
AKG	HUB 4000 Q		Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
AKG	IVM 4	9002761019315	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
AKG	PS 4000 W		Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
AKG	PSU 4000		Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
AKG	SR 45	885038028017	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
AKG	SR 450		Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
AKG	SR 4500		Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
AKG	SR 470		Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
AKG	SST 4		Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
AKG	WMS40	885038033103	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
Akira -Neoart	EMP 500		LCD/Plasma	G-LCD-5052	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55	
Akira -Neoart	EMP420A/B		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-TOUR ELIFT 42
Akira -Neoart	HPT500AW		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Akira -Neoart	SV4202IQ		LCD/Plasma	G-LCD-4647	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-TOUR ELIFT 42
Alesis	A6		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Alesis	ANDROMEDA		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Alesis	CD TWIN LE		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Alesis	iMultiMix 16 USB		Mixer	G-MIX-B2118	G-MIX-L1618A	G-MIX19X21	G-MIX20X25	GMC-2222
Alesis	iMULTIMIX 16USB		Mixer	G-MIX-B2118	G-MIX-L1618A	G-MIX19X21	G-MIX20X25	GMC-2222
Alesis	iO Dock	694318012093	Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Alesis	MULTIMIX 12FXD		Mixer	G-MIX-B1515	G-MIX-L1618A	G-MIX17X18	G-TOUR12X17	
Alesis	MULTIMIX 16 FIREWIRE		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Alesis	MULTIMIX 16 USB 2.0	694318009628	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Alesis	MULTIMIX16FIREWIRE		Digital Audio Gear	G-CLUB CONTROL	GX-1818-6-TSA	GXDF-1919-7-TSA	GU-1813-06-WPDF	
Alesis	MULTIMIX8FIREWIRE		Digital Audio Gear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Alesis	Performance Pad	694318010891	Digital Audio Gear	GX-1921-8-TSA	GX-2225-8-TSA	GXDF-1921-8-TSA	GXDF-2030-8-TSA	GXDF-2225-8-TSA
Alesis	QS6.2		Keyboard	GKB-49	GK-49	GKPE-49-TSA		
Alesis	QS8.1		Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Alesis	STUDIO 24		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Allen & Heath	XB-14	6938122234352	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Allen & Heath	XONE:32		DJ Mixer	G-CLUB CDMX-10	G-CLUB CONTROL	G-TOUR MIX 10	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
Allen & Heath	XONE:42	6938122229846	DJ Mixer	G-CLUB CONTROL	G-TOUR MIX 12	G-TOURCOF-SMCD12	G-TOURCOF-LGCD12 (w	
Allen & Heath	ZED-12FX	6938122230828	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Allen & Heath	ZED-12FX USB	6938122230828	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Allen & Heath	ZED-14	693812229051	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Allen & Heath	ZED-16FX	6938122237490	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Allen & Heath	ZED-18	6938122237575	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Allen & Heath	ZED-22FX	6938122230903	Mixer	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X30	G-TOUR20X25	G-TOUR20X30
Allen & Heath	ZED-22FX USB	6938122230897	Mixer	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X30	G-TOUR20X25	G-TOUR20X30
Allen & Heath	ZED-24	6938122229297	Mixer	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X30	G-TOUR20X25	G-TOUR20X30
Allen & Heath	ZED-R16	6938122232518	Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-MIX24X36	G-TOUR20X25	G-TOUR20X30
Alto Audio	L-12		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Alto Audio	Lynx-Mix 164 USB		Mixer	G-MIX-B2118	G-MIX-L1622	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Alto Audio	PM-12 DRAGONFLY		Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Alto Audio	S-12		Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Alto Audio	S-16		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Alto Professional	TS112		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212
Alto Professional	TS112A	816311010016	Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212
Alto Professional	TS112PRO		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212
Alto Professional	TS112W		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212
Alto Professional	TS115W		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-215
Alto Professional	ZMX124FX		Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Alto Professional	ZMX164FX	816311010191	Mixer	G-MIX-B2118	G-MIX-L1622	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Alvarez	Artist Series AD60K		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Alvarez	Artist Series AD60S	814295011937	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Alvarez	Artist Series AD70S	814295012057	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Alvarez	Artist Series AD80SSB		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Alvarez	CYM95		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Alvarez	MC90		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Alvarez	RC10		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Alvarez	RD8		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Alvarez	RD9		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
American Audio	CDI 300		DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-LGCD10 (w	G-TOURCOF-LGCD12 (w	
American Audio	CDI 300 MP3		DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-LGCD10 (w	G-TOURCOF-LGCD12 (w	
American Audio	CDI 500		DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-LGCD10 (w	G-TOURCOF-LGCD12 (w	
American Audio	CDI 500 MP3		DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-LGCD10 (w	G-TOURCOF-LGCD12 (w	
American Audio	CD5-1		DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-SMCD10	G-TOURCOF-SMCD12	
American Audio	CK-1000		DJ Mixer	G-TOUR TT1200				
American Audio	CK-800		DJ Mixer	G-TOUR TT1200				

Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
American Audio	DLS-15		Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
American Audio	DLS-15P	640282016834	Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
American Audio	DV2-USB	640282002097	DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10	G-TOURCOF-LGCD10 (w	
American Audio	Encore 1000	640282002110	DJ CD Player	G-TOUR TT200				
American Audio	Encore 2000	640282002103	DJ CD Player	G-TOUR TT200				
American Audio	Flex 100MP3	640282001533	DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-LGCD10 (w	G-TOURCOF-LGCD12 (w	
American Audio	MCD-100		DJ CD Player	G-CLUB CONTROL	G-CLUB CONTROL 25			
American Audio	MCD-710		DJ CD Player	G-CLUB CONTROL	G-CLUB CONTROL 25			
American Audio	MX-1400		DJ Mixer	G-CLUB CONTROL	G-TOUR MIX 12	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
American Audio	MX-1400 DSP		DJ Mixer	G-CLUB CONTROL	G-TOUR MIX 12	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
American Audio	PRO DJ1		DJ CD Player	G-CLUB CDMX-10				
American Audio	PRO DJ2		DJ CD Player	G-CLUB CDMX-10				
American Audio	PRO DJ3		DJ CD Player	G-CLUB CDMX-10				
American Audio	PRO SCRATCH1		DJ CD Player	G-CLUB CDMX-10				
American Audio	PXI-12P		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712SM	GPA-777	G-TOUR SPKR-212
American Audio	PXI-15P		Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
American Audio	Q-221		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
American Audio	Q-2221/SX		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
American Audio	Q-2221/X		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
American Audio	Q-D3		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
American Audio	Q-D5		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
American Audio	Q-D5 MKII		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
American Audio	Q-D5B		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
American Audio	Q-D6	640282045605	DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
American Audio	Q-MX2BPM		DJ Mixer	G-TOUR CD 1000	G-TOUR MIX 12	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
American Audio	Radius 1000	640282092371	DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
American Audio	Radius 3000	640282000963	DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
American Audio	SENSE 12		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212
American Audio	SENSE 15		Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
American Audio	UCD-100	640282001519	DJ CD Player	G-CLUB CONTROL	G-CLUB CONTROL 25	G-CLUB KB CONTROL		
American Audio	UCD-200	640282001526	DJ CD Player	G-CLUB CONTROL	G-CLUB CONTROL 25	G-CLUB KB CONTROL		
American Audio	Velocity MP3	640282055505	DJ CD Player	G-CLUB CONTROL	G-CLUB CONTROL 25			
American Audio	VMS-4		DJ Controller	G-CLUB CONTROL	G-CLUB CONTROL 25	G-TOUR VMS4	G-TOUR VMS4K	G-TOUR VMS4-ARM1-
American Audio	VMS-4.1	640282002349	DJ Controller	G-CLUB CONTROL	G-CLUB CONTROL 25	G-TOUR VMS4	G-TOUR VMS4K	G-TOUR VMS4-ARM1-
American Audio	VMS-4.1 Traktor		DJ Controller	G-CLUB CONTROL	G-CLUB CONTROL 25	G-TOUR VMS4	G-TOUR VMS4K	G-TOUR VMS4-ARM1-
American Audio	WM-16HH	640282056267	Wireless System	GM-1W	GM-4WR	GM-5W		
American Audio	XSP-12		Speaker	GPA-SCVR450-515	GPA-712SM	GPA-777	G-TOUR SPKR-212	G-PA TRANSPORT-SM
American Audio	XSP-12A	640282000376	Speaker	GPA-SCVR450-515	GPA-712SM	GPA-777	G-TOUR SPKR-212	G-PA TRANSPORT-SM
American Audio	XSP-15		Speaker	GPA-712LG	GPA-715	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
American Audio	XSP-15A	640282000369	Speaker	GPA-712LG	GPA-715	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
APC	H10BLK	731304236542	Digital Audio Gear	G-MULTIFX-2411	GU-1711-06-WPDF	GU-1813-06-WPDF	G-TOURCARRYONFO	
Apogee	GiO	805676300801	Digital Audio Gear	G-MULTIFX-2411	GU-1813-06-WPDF	GU-2014-08-WPDF	GU-2217-08-WPDF	G-TOURCARRYONFO
Apple	iPad		Digital Audio Gear	G-TABLETMIX-BAG	G-BROADCASTER	G-MULTIFX-1110	GXDF-1116-5-TSA	GU-1309-06-WPDF
Apple	iPad 2	885909471812	Digital Audio Gear	G-TABLETMIX-BAG	G-BROADCASTER	G-MULTIFX-1110	GXDF-1116-5-TSA	GU-1309-06-WPDF
Apple	iPad3	742315738994	Digital Audio Gear	G-TABLETMIX-BAG	G-BROADCASTER	G-MULTIFX-1110	GXDF-1116-5-TSA	GU-1309-06-WPDF
Aria	PE-STD Series		Acoustic Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Arturia	Origin		Keyboard	GKB-61	GK-61	GKC-1540		
Ashly	LX308B	844635050579	Digital Audio Gear	G-MULTIFX-2411	GU-1813-06-WPDF	GU-2014-08-WPDF	GU-2217-08-WPDF	G-TOURCARRYONFO
Ashton	BA50		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Atlas Sound	AA60		Digital Audio Gear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Audio Technica	AT-LP1240-USB	042005175130	Turntable	G-TOUR TT200				
Audio Technica	AT-LP240-USB		Turntable	G-TOUR TT200				
Audio Technica	ATPL120		Turntable	G-TOUR TT200				
Audio Technica	ATW2120	4961310108847	Wireless System	GM-1W	GM-1WP	GM-2W	GM-5W	GM-7W-TSA

Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Audio Technica	ATW-2129	042005164356	Wireless System	GM-1W	GM-1WP	GM-2W	GM-5W	GM-7W-TSA
Audio Technica	ATW-2192-TH	042005164318	Wireless System	GM-1W	GM-1WP	GM-2W	GM-5W	GM-7W-TSA
Audio Technica	ATW-251		Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Audio Technica	ATW-251/H92-TH	042005154463	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Audio Technica	ATW-252	042005149223	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Audio Technica	ATW-701	042005145522	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Audio Technica	ATW-701 700 Series		Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Audio Technica	ATW-701/H92-TH	042005154258	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Audio Technica	ATW-702	042005145560	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Audio Technica	ATW-R2100a	4961310108779	Wireless System	GM-1W	GM-1WP	GM-2W	GM-5W	GM-7W-TSA
Audio Technica	ATW-R250	042005149148	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Audio Technica	ATW-R3100b	889406417489	Wireless System	GM-1W	GM-1WP	GM-2W	GM-5W	GM-7W-TSA
Audio Technica	M2	042005157457	Wireless System	GM-1W	GM-1WP	GM-2W	GM-5W	G-JN EAR SYSTEM
Audio Technica	M3	4961310100568	Wireless System	GM-1W	GM-1WP	GM-2W	GM-5W	G-JN EAR SYSTEM
Behringer	B215A		Speaker	GPA-SCVR450-515	GPA-712LG	GPA-715	GPA-777	G-TOUR SPKR-212
Behringer	BCD2000	4033653130226	Mixer	G-MIX-B1515	G-MIX-L1618A	G-MIX17X18	G-TOUR12X17	
Behringer	BEDDX3216		Mixer	G-MIX-B2519	GMIX-2030-8-TSA	GMIX-2225-8-TSA	G-MIX20X25	
Behringer	DDX3216		Mixer	G-MIX-B2519	GMIX-2030-8-TSA	GMIX-2225-8-TSA	G-MIX20X25	
Behringer	DEEJAY BCD3000	4033653130325	DJ CD Player	G-TOUR CD 1000	G-TOURCOF-LGCD10 (w	G-TOURCOF-LGCD12 (w		
Behringer	DJX400		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10	G-TOURCOF-LGCD10 (w	
Behringer	DJX750	4033653130356	DJ Mixer	G-CLUB CDMX-12	G-TOUR MIX 12	G-TOURCOF-SMCD12	G-TOURCOF-LGCD12 (w	
Behringer	DX2000USB	4033653130400	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	EURORACK UB2442FX PRO	4033653020374	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	LC2412	4033653100038	Digital Audio Gear	G-MULTIFX-2411	GX-1818-6-TSA	GXDF-1919-7-TSA	GU-1813-06-WPDF	G-TOURCARRYONFO
Behringer	MX1604A		Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Behringer	MX1804X		Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	MX2004A		Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	MX2442A		Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-MIX24X36	G-TOUR20X25	G-TOUR20X30
Behringer	MX3242X		Mixer	G-MIX-B2123	G-MIX-L1926	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Behringer	PMH1000		Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	PMH3000		Mixer	G-MIX-B2020	GMIX-1921-6-TSA	GMIX-2225-6-TSA	G-MIX19X21	G-TOUR19X21
Behringer	PMH5000		Mixer	GMIX-2030-6-TSA	GMIX-2225-6-TSA	G-MIX20X25	G-MIX20X30	G-TOUR20X30
Behringer	PMP1000	4033653020961	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	PMP3000		Mixer	G-MIX-B2020	GMIX-1921-6-TSA	GMIX-2225-6-TSA	G-MIX19X21	G-TOUR19X21
Behringer	PMP4000	4033653021234	Mixer	G-MIX-B2020	GMIX-1921-6-TSA	GMIX-2225-6-TSA	G-MIX19X21	G-TOUR19X21
Behringer	PMP5000		Mixer	GMIX-2030-6-TSA	GMIX-2225-6-TSA	G-MIX20X25	G-MIX20X30	G-TOUR20X30
Behringer	PMP6000	4033653021241	Mixer	GMIX-2030-6-TSA	GMIX-2225-6-TSA	G-MIX20X25	G-MIX20X30	G-TOUR20X30
Behringer	SL2442FX-PRO		Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-MIX24X36	G-TOUR20X25	G-TOUR20X30
Behringer	UB1224FX-PRO		Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Behringer	UB1622FX-PRO		Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Behringer	UB1832FX-PRO		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	UB2222FX-PRO		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	UB2442FX-PRO	4033653020374	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	ULTRACOUSTIC	4033653051781	Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Behringer	ULTRACOUSTIC ACX900	4033653051774	Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Behringer	VP1220	4033653062312	Speaker	GPA-SCVR450-515	GPA-777	G-TOUR SPKR-212		
Behringer	VP1220D	4033653062756	Speaker	GPA-SCVR450-515	GPA-777	G-TOUR SPKR-212		
Behringer	VS1220	4033653062275	Speaker	GPA-SCVR450-515	GPA-777	G-TOUR SPKR-212		
Behringer	VT250FX	4033653051873	Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Behringer	X1222USB	4033653021173	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Behringer	X1832USB	4033653021197	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	X2222USB	4033653021203	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	X2442USB	4033653021210	Mixer	G-MIX-B1818	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	XENYX 1204	4033653021159	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Behringer	XENYX 1204FX		Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Behringer	XENYX 1222 FX		Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	
Behringer	XENYX 1622 FX	4033653021180	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Behringer	XENYX 1832 FX		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	XENYX 2222FX		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	XENYX 2442 FX		Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	XENYX X1832USB	4033653021197	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	XENYX X2222USB	4033653021203	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	XENYX X2442USB	4033653021210	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Benjamin Adams	CK62		Keyboard	GKB-61	GK-61	GKC-1540		
BenQ	MP727		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	G-TOURCARRYONPL		
BenQ	MP777		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	G-TOURCARRYONPL		
BenQ	MP777		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	G-TOURCARRYONPL		
BenQ	PB2140		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
BenQ	PB2240		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
BenQ	PB7110		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
BenQ	PB7200		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
BenQ	PB7210		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
BenQ	PB7230		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
BenQ	SP820		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
BenQ / Acer	859		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
BenQ / Acer	46W1		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Boss	AD-8	761294082331	Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Boss	BR1180CD		Digital Audio Gear	G-MULTIFX-2411	G-CLUB-CONTROL	GXDF-1919-7-TSA	GU-2014-08-WPDF	G-TOURCARRYONFO
Boss	BR1200CD	761294086865	Digital Audio Gear	G-CLUB-CONTROL25	GXDF-1921-6-TSA	GXDF-2030-6-TSA	GU-2014-08-WPDF	G-TOUR20X30
Boss	BR1600CD	761294083178	Digital Audio Gear	G-CLUB-CONTROL25	GXDF-1921-6-TSA	GXDF-2030-6-TSA	GU-2014-08-WPDF	GU-2217-08-WPDF
Boss	BR-600		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Boss	BR-800	761294411872	Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Boss	BR-900CD		Digital Audio Gear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1510-06-WPDF	G-TOURCARRYONFO
Boss	DR-880	761294085592	Digital Audio Gear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GXDF-1919-7-TSA	
Boss	GS-10		Digital Audio Gear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Boss	GT-10	761294406281	Digital Audio Gear	G-MULTIFX-2411	G-CLUB-CONTROL25	GXDF-2030-6-TSA	GU-2217-08-WPDF	
Boss	GT-10B	761294406298	Digital Audio Gear	G-MULTIFX-2411	G-CLUB-CONTROL25	GXDF-2030-6-TSA	GU-2217-08-WPDF	
Boss	GT-10B		Digital Audio Gear	G-MULTIFX-2411	G-CLUB-CONTROL25	GXDF-2030-6-TSA	GU-2217-08-WPDF	

Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Boss	GT-6		Digital Audio Gear	G-MULTIFX-2411	G-CLUB-CONTROL25	GXDF-2030-6-TSA	GU-2217-08-WPDF	
Boss	GT-6B		Digital Audio Gear	G-MULTIFX-2411	G-CLUB-CONTROL25	GXDF-2030-6-TSA	GU-2217-08-WPDF	
Boss	GT-8		Digital Audio Gear	G-MULTIFX-2411	G-CLUB-CONTROL25	GXDF-2030-6-TSA	GU-2217-08-WPDF	
Boss	ME-20		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Boss	ME-50		Digital Audio Gear	G-MULTIFX-1510	GXDF-1116-5-TSA	GU-1711-06-WPDF	GU-1813-06-WPDF	G-TOURCARRYONFO
Boss	ME-50B	761294085196	Digital Audio Gear	G-MULTIFX-1510	G-CLUB-CONTROL	GXDF-1116-5-TSA	GU-1711-06-WPDF	G-TOURCARRYONFO
Boss	ME-70	761294408742	Digital Audio Gear	G-MULTIFX-1510	G-CLUB-CONTROL	GXDF-1116-5-TSA	GU-1711-06-WPDF	G-TOURCARRYONFO
Boss	SP-505		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GXDF-1919-7-TSA
Boxlight	PD4600		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Bugera	V22	4033653054058	Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Canon	LV-5220		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	G-TOURCARRYONPL		
Canon	LV-7220		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	G-TOURCARRYONPL		
Canon	LV-7225		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	G-TOURCARRYONPL		
Canon	LV-7230		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	G-TOURCARRYONPL		
Canon	LV-S3		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Canon	LV-S4		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Canon	LV-X4		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Carlsbro	DX 8-2 XP		Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Casio	AT3	079767313838	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	AT5	079767313869	Keyboard	GKB-76	GK-76	GKPE-76D-TSA	G-TOUR 76V2	GKC-1648
Casio	CTK-2000	079767313517	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	CTK-2100	079767313654	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	CTK-2100		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	CTK-3000	079767313531	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	CTK-3200	079767314071	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	CTK4000	079767313548	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	CTK-4200	079767314002	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	CTK-496		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	CTK5000		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	CTK6000	079767313814	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	CTK-691		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	CTK7000	079767313821	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	CTK710		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	CTK800		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	CTK810		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	CTK900		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	LK-165	874171004248	Keyboard	GKB-61	GK-61-SLIM	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	LK-2005		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	LK-220		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	LK-230	079767313661	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	LK-270		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	LK-280	079767314026	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	LK-300TV		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Casio	P70		Keyboard	GKB-88 SLXL	GK-88 SLXL	GKPE-88SLXL-TSA	GKPE-88-TSA	G-TOUR-88V2SL
Casio	P70S		Keyboard	GKB-88 SLXL	GK-88 SLXL	GKPE-88SLXL-TSA	GKPE-88-TSA	G-TOUR-88V2SL
Casio	PS20		Keyboard	GKB-88 SLIM	GK-88 SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR-88V2SL
Casio	PX500L		Keyboard	GKB-88 SLIM	GK-88 SLIM	GKPE-88SLIM-TSA		
Casio	WK-110		Keyboard	GKB-76	GK-76	GKPE-76D-TSA	G-TOUR 76V2	GKC-1648
Casio	WK-225	079767314040	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Casio	WK-6500	079767313845	Keyboard	GKB-76	GK-76	GKPE-76D-TSA	G-TOUR 76V2	GKC-1648
Casio	WK7500	079767313852	Keyboard	GKB-76	GK-76	GKPE-76D-TSA	G-TOUR 76V2	GKC-1648
Casio	WK-7500	079767313852	Keyboard	GKB-76	GK-76	GKPE-76D-TSA	G-TOUR 76V2	GKC-1648
Casio	XJ-560		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Casio	XJ-A240	079767184377	Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Casio	XJ-SC215-W		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Casio	XW-G1	079767314163	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Casio	XW-P1	079767314156	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Casio	YPG-225		Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Casio	YPG-525		Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR 88V2	GKC-1648
Cerwin Vega	LW15		Speaker	GPA-777	G-SUB2225-24BAG			
Champion	42CV1		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Ciil	CL-40PLC67		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Ciil	CL-46PLC67		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Clavia	RACK3		Digital Audio Gear	G-MULTIFX-2411	G-CLUB-CONTROL25	GU-2014-08-WPDF	GU-2217-08-WPDF	G-TOURCARRYONFO
CME	UF6		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
CME	UF60	877295000585	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
CME	VX 6		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Coby	TFTV1925	716829991954	LCD/Plasma	GL-LCD-1922	G-MONITOR2-G019	G-MONITOR2-G022		
Coby	TFTV4025	716829994252	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Community	DnD12		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-7125M	GPA-777	G-TOUR SPKR-212
Community	DnD15		Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-PA TRANSPORT-SM
Community	S-1296		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-7125M	GPA-777	G-TOUR SPKR-212
Community	SBS12		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212
Community	SLS920		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212
Community	SLS920H		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212
Cooper Sound	SYSTEM 6		Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Cooper Sound	SYSTEM 8		Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Cordoba	32E		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Cordoba	32EF		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Cordoba	45FM	809870038614	Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Cordoba	45FP		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Cordoba	55R		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Cordoba	CS	809870026833	Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Cordoba	Cadete	809870028196	Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Cordoba	Requinto		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Cordoba	Solista		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Cordoba	Solista Flamenca		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Cordoba	45R		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Cortex	HDTT-5000	747706001893	DJ CD Player	G-CLUB CDMX-12	G-CLUB CONTROL	G-TOUR CD 2000	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)
Crate	CA125DG	743565223582	Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Crate	GT1125L		Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Crate	GT212		Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Crate	GT65		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Crate	GTX212		Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Crate	GTX65		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		

Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Crate	V3112		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Crate	VFX5112		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Crate	VTX65B		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Crate	XT120R		Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Creative-Labs	PROKEYS PD-MIDI		Keyboard	GK-2110	GK-LT25W			
Crest Audio	XR20		Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Crest Audio	XR24		Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Crest Audio	XRM		Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Daewoo	DP-425M		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Daewoo	DSP-4210GM		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Daewoo	PPM-4253		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Dave Smith	POLY EVOLVER KEYBOARD	855346000869	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V25L	GKC-1540
Dave Smith	POLY EVOLVER RACK		Digital Audio Gear	G-MULTIFX-2411	G-CLUB-CONTROL	G-CLUB-CONTROL25	GU-2014-08-WPDF	G-TOURCARRONFO
dB Technologies	Flexsys F12		Speaker	GPA-SCVR450-515	GPA-712SM	GPA-712LG	GPA-777	G-TOUR SPKR-212
dB Technologies	Opera 402 D		Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
dB Technologies	Opera 405 D		Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
dB Technologies	Opera 602 D		Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
dB Technologies	Opera 605 D		Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
DB Technologies	OPERA LIVE 402		Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
Dean	Espana CSCR	819998004590	Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Dean	Espana CSR		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Dean	Tradition AK48	819998010027	Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Dean	Tradition AK48	819998010027	Acoustic Guitar	G-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Dell	SP2008WFP		LCD/Plasma	GL-LCD-1922	G-MONITOR2-GO22			
Dell	W4200		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Delphi	DD42 EVOLUTION		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Delphi	DD42 PANACHE		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Delphi	PRO42 EVOLUTION		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Delphi	PRO42 PANACHE		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Denon	DN-C680		DJ CD Player	G-CLUB CONTROL	G-CLUB CONTROL 25			
Denon	DN-F400	883795001106	DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	
Denon	DN-MC6000	883795001878	DJ Controller	G-CLUB CONTROL	G-CLUB KB CONTROL	G-TOUR MC6000		
Denon	DN-S1000		DJ CD Player	G-CLUB CDMX-10	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)		
Denon	DN-S1200 CD	883795000314	DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-SMCD10	G-TOURCOF-SMCD12	
Denon	DN-SC2000	883795001748	DJ Controller	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)-ARM1-PL-CD	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)-ARM1-PL-CD	
Denon	DN-X1500		DJ Mixer	G-TOUR CD 1000	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)		
Denon	DN-X300		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
Denon	DNX600	883795001694	DJ Mixer	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOUR MIX 10	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)
Denon	DNX600	883795001694	DJ Mixer	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOUR MIX 10	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)
Denon	MC3000	883795002134	DJ Controller	G-CLUB CONTROL	G-TOUR CD 2000	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
Denon	RC-F400S		DJ CD Player	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)			
Denon	SC3900	883795002165	DJ CD Player	G-CLUB CDMX-12				
Digidesign	COMMAND 8		Digital Audio Gear	GX-1818-6-TSA	GX-1921-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	GXDF-2225-6-TSA
Digidesign	DIGI002		Digital Audio Gear	GX-1921-8-TSA	GX-2225-8-TSA	GXDF-1919-7-TSA	GXDF-1921-8-TSA	GXDF-2225-8-TSA
Digidesign	MBOX2 PRO		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Digidesign	OO2R		Digital Audio Gear	G-CLUB-CONTROL	G-CLUB-CONTROL25	GXDF-1919-7-TSA	GU-2014-08-WPDF	GU-2217-08-WPDF
Digitech	BP200	691991200359	Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Digitech	BP355	691991202148	Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Digitech	GNX1		Digital Audio Gear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1510-06-WPDF	G-TOURCARRONFO
Digitech	GNX3000		Digital Audio Gear	G-MULTIFX-2411	G-CLUB-CONTROL	GXDF-1919-7-TSA	GU-2014-08-WPDF	G-TOURCARRONFO
Digitech	iPB-10	691991202520	Digital Audio Gear	G-MULTIFX-2411	GXDF-1224-8	GXDF-1921-6-TSA	GXDF-2030-6-TSA	GU-2217-08-WPDF
Digitech	Live 4	691991201172	Digital Audio Gear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1510-06-WPDF	G-TOURCARRONFO
Digitech	Live 5	691991202131	Digital Audio Gear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1510-06-WPDF	G-TOURCARRONFO
Digitech	RG335		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Digitech	RP150		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Digitech	RP155	691991201851	Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Digitech	RP255	691991201868	Digital Audio Gear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1510-06-WPDF	G-TOURCARRONFO
Digitech	RP350		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Digitech	RP355	691991201875	Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Digitech	VL4		Digital Audio Gear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1510-06-WPDF	G-TOURCARRONFO
Digitech	VOCAL 300	691991200366	Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Dr. Z	Maz 18 Jr. 1x12		Amp/Cabinet	G-112-ROTO	G-TOUR AMP112	G-212-ROTO		
Dr. Z	Maz 18 Jr. 2x10		Amp/Cabinet	G-112-ROTO	G-TOUR AMP112	G-212-ROTO		
Dynex	DX-32E150A11		LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
Dynex	DX-32L100A13		LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
Dynex	DX-32L221A12		LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
Dynex	DX-32L230A12		LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
Dynex	DX-32L150A11		LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
Dynex	DX-40L261A12	600603138911	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Dynex	DX-46L150A11		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Dynex	DX-55L150A11		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCDLIFT55	G-TOUR ELIFT 55
Dynex	DX-L42-10A		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
EAW	JF26		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712SM	GPA-777	G-TOUR SPKR-212
Edirol	M10DX		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Edirol	M16DX		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Edirol	UA-700		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF



Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Edrol	UR-80		Digital Audio Gear	G-MULTIFX-1510	G-CLUB-CONTROL	GXDF-1116-5-TSA	GU-1711-06-WPDF	G-TOURCARRYNFO
Egnater	Renegade 112	763815125510	Amp/Cabinet	G-112A	G-TOUR AMP112	G-212-ROTO		
Egnater	Renegade 212	763815125527	Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Egnater	Tweaker-40 112	763815125978	Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Eiki	LC-XB28		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYNPL
Eiki	PLD-42XU		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Eizo	CG210		LCD/Plasma	GL-LCD-1922	G-MONITOR2-GO22			
Eizo	P5070		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Eizo	P5071		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Electro-Voice	ELX112	800549589536	Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712SM	GPA-777	G-TOUR SPKR-212
Electro-Voice	ELX112P	800549589505	Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712SM	GPA-777	G-TOUR SPKR-212
Electro-Voice	R300-HD	8717332771455	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-2W-TSA
Electro-Voice	RE2		Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Electro-Voice	RE2 Handheld	701001021215	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Electro-Voice	RE2 Pro		Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Electro-Voice	SX250	800549416122	Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-PA TRANSPORT-SM
Electro-Voice	Xw12A		Speaker	GPA-777	G-PA TRANSPORT-SM			
Electro-Voice	Xw15A		Speaker	GPA-777	G-TOUR SPKR-215			
Electro-Voice	ZX3	800549445412	Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212
Elektron	Machinedrum SPS-1 UW MKII		Digital Audio Gear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	
E-MU	0404 USB		Digital Audio Gear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Envision	A42W64		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Epiphone	1963 AJ-45		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Epiphone	AJ-1		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Epiphone	AJ-200S		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Epiphone	Collegiate		Electric Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Epiphone	Dot	711106225883	335 Guitar	G-COM-335	GC-335	GPE-335-TSA	GWE-335	GW-335-BROWN
Epiphone	Dove	711106264264	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Epiphone	DR-100	711106263380	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Epiphone	DR-200S		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Epiphone	Hummingbird	711106321035	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Epiphone	Les Paul Black Beauty	711106268293	Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Epiphone	Les Paul Custom	711106329895	Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Epiphone	Les Paul Special II	711106260204	Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Epiphone	Les Paul Standard	711106260235	Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Epiphone	Les Paul Standard Plus Top	711106329840	Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Epiphone	Les Paul Studio	711106306490	Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Epiphone	Les Paul Ultra		Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Epiphone	LP-100	711106260174	Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Epiphone	Masterbilt AJ-500M		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Epiphone	Masterbilt AJ-500R		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Epiphone	Masterbilt DR-500RA		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Epiphone	Masterbilt EF-500RA		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Epiphone	Paul McCartney 1964 Texan		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Epiphone	PR-150	711106313177	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Epiphone	Zack Wylde Les Paul Custom		Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Epson	730		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYNPL
Epson	760		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYNPL
Epson	730C		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYNPL
Epson	EX100	010343870673	Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYNPL
Epson	EX71 WXGA		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYNPL
Epson	Power Lite V11H228020		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYNPL
Epson	PowerLite 1220	010343878495	Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYNPL
Epson	PowerLite 1260	010343878501	Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYNPL
Epson	PowerLite 1715C	010343858237	Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYNPL
Epson	PowerLite 1750	010343879935	Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYNPL
Epson	PowerLite 1760W	010343879942	Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYNPL
Epson	PowerLite 1770W	010343879959	Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYNPL
Epson	PowerLite 1775W	010343879966	Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYNPL
Epson	PowerLite 732C		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYNPL
Epson	PowerLite 737C		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYNPL
Epson	PowerLite 740C		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYNPL
Epson	PowerLite 745C		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYNPL
Epson	PowerLite S9	010343878303	Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICE-W		
Epson	PowerLite VS200		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYNPL
Epson	PowerLite X9	010343883628	Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYNPL
ESP	LTD Deluxe EC-1000	840248022293	Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
ESP	LTD EC-400		Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
ESP	LTD KH-202 Kirk Hammett Signature	840248009829	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
ESP	M-1000		Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
ESP	M-200FM		Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
EVH	Eddie Van Halen Frankenstein Replica		Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
FBT	MAXX 2		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712SM	GPA-777	G-TOUR SPKR-212
FBT	MAXX 4		Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
FBT	MAXX4a		Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-PA TRANSPORT-SM
FBT	VERVE 18S		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212
Fender	64 Vibroverb		Amp/Cabinet	G-TOUR AMP112	G-212A	G-212-ROTO		
Fender	65 DELUXE REVERB	717669051815	Amp/Cabinet	G-112A	G-TOUR AMP112	G-212-ROTO		
Fender	65 TWIN REVERB	717669051730	Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Fender	Acoustasonic 150	717669998516	Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Fender	ACOUSTASONIC JR		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Fender	American Ash Telecaster	717669758370	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Fender	American Deluxe Ash	717669758264	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Fender	American Deluxe Series		Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Fender	American Deluxe	717669758264	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Fender	American Deluxe	717669758141	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Fender	American Series		Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Fender	American Vintage '62	885978173488	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Fender	Artist Series Eric	717669315955	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec

Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Fender	Artist Series Yngwie	717669536244	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Fender	BLONDE HOT ROD	885978137190	Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Fender	BLUES DELUXE	717669309985	Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Fender	CD100	717669961732	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Fender	CD-140SCE	717669961626	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Fender	CD220CE	885978127948	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Fender	CD220S		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Fender	CD-60	885978150946	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Fender	Classic Series '50s	717669018481	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Fender	Classic Series '72	717669274610	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Fender	Classic Series '72	717669739362	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Fender	DELUXE 900		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Fender	Deluxe Player's Stratocaster	717669299651	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Fender	Deluxe Series Nashville Telecaster	717669301095	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Fender	DG100		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Fender	DUAL PROFESSIONAL		Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Fender	ECTremolux		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Fender	ECTwinolux		Amp/Cabinet	G-TOUR AMP112	G-212A	G-212-ROTO		
Fender	Excelsior	885978151622	Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Fender	FM 212R	717669626426	Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Fender	FM210R		Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Fender	FM212 DSP		Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Fender	FRONTMAN 212R	717669626426	Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Fender	HOT ROD DELUXE	717669886332	Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Fender	HOT ROD DEVILLE 212		Amp/Cabinet	G-TOUR AMP112	G-212A	G-212-ROTO		
Fender	Mustang III	717669849351	Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Fender	ROC PRO 700		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Fender	STAGE 1000	717669268299	Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Fender	STAGE 1600		Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Fender	Standard HSS Stratocaster	885978111091	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Fender	Standard Stratocaster	885978110797	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Fender	Standard Telecaster	885978111299	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Fender	ULTIMATE CHORUS		Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Fender	VG Stratocaster		Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Fender	VIBRO KING 212	717669204297	Amp/Cabinet	G-TOUR AMP112	G-212A	G-TOUR AMP212		
Fender	Vintage Hod Rod '52 Telecaster	717669716684	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Fostex	MR-16HD		Digital Audio Gear	GX-1921-8-TSA	GXDF-1919-7-TSA	GXDF-1921-8-TSA	GXDF-2030-8-TSA	GXDF-2225-8-TSA
Fostex	MR-16HD/CD		Digital Audio Gear	GX-1921-8-TSA	GXDF-1919-7-TSA	GXDF-1921-8-TSA	GXDF-2030-8-TSA	GXDF-2225-8-TSA
Fostex	MR-8		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFIX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Fostex	MR8 MKII	636827006019	Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFIX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Fostex	X12		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFIX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Fujitsu	P42VHA10		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Fujitsu	P42VHA10		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Fujitsu	P50XHA10		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Fujitsu	PDS-4208		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Fujitsu	PDS-4209		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Fujitsu	PDS-4210		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Fujitsu	PDS-4211		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Fujitsu	PDS-4212		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Fujitsu	PDS-4213		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Fujitsu	PDS-4214		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Fujitsu	PDS-4221		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Fujitsu	PDS-4222		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Fujitsu	PDS-4233		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Fujitsu	PDS-5001		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Galaxy Audio	AS-TV10		Speaker	GPA-5CVR450-515	GPA-450-515	GPA-712SM	GPA-777	G-TOUR SPKR-212
Gateway	42 ED & 42 HD		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Gateway	50 ED & 50 HD		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Gateway	GTW-P42M102		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Gateway	GTW-P42M103		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Gemini	CDJ SERIES		DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000			
Gemini	CDJ-202		DJ CD Player	G-TOUR CD 1000				
Gemini	CDJ-203	747705204264	DJ CD Player	G-TOUR CD 1000				
Gemini	CDJ-650	747705206701	DJ CD Player	G-CLUB CDMX-10	G-TOURCOF-SMCD10	G-TOURCOF-SMCD12		
Gemini	CDM-3200		DJ CD Player	G-CLUB CONTROL	G-CLUB CONTROL 25			
Gemini	CDMP-1400	747705205100	DJ CD Player	G-CLUB CONTROL	G-CLUB CONTROL 25			
Gemini	CDX-1210	747705205940	DJ CD Player	G-CLUB CONTROL	G-CLUB CONTROL 25			
Gemini	CDX-2500G		DJ CD Player	G-CLUB CONTROL	G-CLUB CONTROL 25			
Gemini	CFX-30		DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000			
Gemini	CNTRL-2	747705207586	DJ Controller	G-CLUB CDMX-10	G-CLUB CONTROL	G-TOUR CD 1000	G-TOURCOF-LGCD10 (w or w/out ARMI-PL)	G-TOURCOF-LGCD12 (w or w/out ARMI-PL)

Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Gemini	CNTRL-7	747705207579	DJ Controller	G-CLUB CDMX-10	G-CLUB CONTROL	G-TOUR CD 1000	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)
Gemini	CTRL-ONE	747705205131	DJ CD Player	G-CLUB CDMX-10	G-CLUB CONTROL	G-TOUR CD 1000	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)
Gemini	CTRL-SIX	747705205148	DJ Controller	G-CLUB CDMX-10	G-CLUB CONTROL	G-TOUR CD 1000	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)
Gemini	GVX-12		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212
Gemini	GVX-12P		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212
Gemini	ICDJ		DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000			
Gemini	iTRAX		Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Gemini	MPX-30		DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000			
Gemini	PS3	747705208064	DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
Gemini	PS3-USB	747705208149	DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
Gemini	PS4	747705208248	DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
Gemini	PS-424x	747706006973	DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
Gemini	PS-626FX	747706007819	DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
Gemini	PS-626USB	747705201249	DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
Gemini	PS-626x	747705201201	DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
Gemini	UF-1064		Wireless System	GM-1W	GM-1WP	GM-2W	GM-5W	GM-7W-TSA
Gemini	UF-1264		Wireless System	GM-1W	GM-1WP	GM-2W	GM-5W	GM-7W-TSA
Gemini	UF-2064		Wireless System	GM-1W	GM-1WP	GM-2W	GM-5W	GM-7W-TSA
Gibson	Billie Joe Armstrong	711106008844	Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Gibson	Custom Shop John Lennon Les Paul Junior		Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Gibson	Custom Shop Limited Edition Les Paul	711106001340	Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Gibson	Custom Shop Slash Les Paul Signature		Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Gibson	Hummingbird Artist	711106101965	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Gibson	L5		Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Gibson	Les Paul Antique		Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Gibson	Les Paul Antique Deluxe		Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Gibson	Les Paul BFG		Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Gibson	Les Paul Classic		Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Gibson	Les Paul Classic Custom	711106016498	Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Gibson	Les Paul Deluxe		Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Gibson	Les Paul Junior	711106012544	Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Gibson	Les Paul Menace		Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Gibson	Les Paul Standard	711106260235	Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Gibson	Les Paul Standard 50s Neck		Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Gibson	Les Paul Standard 60s Neck		Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Gibson	Les Paul Standard Double Cut Plus		Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Gibson	Les Paul Studio	711106306490	Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Gibson	Les Paul Supreme Figured	711106004518	Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Gibson	Les Paul Vintage		Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Gibson	Melody Maker	711106009131	Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Gibson	Melody Maker Dual Pickup		Les Paul Guitar	GL-LPS	GC-LPS	GPE-LPS-TSA	G-Tour LPS	GW-LPS
Gretsch	G4510 Showdown		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Guild	D55	717669732127	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Guild	GAD-30R		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Guild	GAD-40C		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Guild	GAD-C2		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Guild	GAD-C3		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Haier	HL47E		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55		
Haier	L39B2180	688057327389	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-LCDCOVER-42	G-TOUR ELIFT 42
Haier	L55B2181		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Haier	LE46B1381	688057327297	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-LCDCOVER-52	G-TOUR ELIFT 47
Haier	LE55B1381	688057327280	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 55
Hammond	SK1	4939334669323	Keyboard	GKB-49	GK-49	GKPE-49-TSA	G-TOUR-61V2SL	GKC-1540
Hammond	XK-2		Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Hammond	XK-3C	4939334667824	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Harbinger	APS12	656238011921	Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-PA TRANSPORT-SM
Hercules	RMX	663296412799	DJ Mixer	G-TOUR MIX 12	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)		
Hewlett-Pckrd	PPL-4245N		LCD/Plasma	G-LCD-4042	G-TOURLCDLIFT55	G-TOUR ELIFT 42		
Hitachi	402HDE		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Hitachi	402HDU		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Hitachi	4120HDU		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Hitachi	42PMA500E		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Hitachi	CMP4201U		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Hitachi	CMP4202U		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Hitachi	CMP4211U		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Hitachi	CMP-5000		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Hitachi	CP-R555		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Hitachi	CP-S318		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL



Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Hitachi	CP-S335		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Hitachi	CP-X275		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Hitachi	CP-X340		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Hitachi	CP-X345		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Hitachi	L42A404		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Hitachi	UT47V702		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 47
HP	LD4200tm		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Ibanez	2005 S2720FM		Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Ibanez	Artwood AW40		Electric Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Ibanez	AW800RNT		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Ibanez	GA3	606559180776	Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Ibanez	Gio GRG170 Double Cut		Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Ibanez	GR6170DX	60655939112	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Ibanez	GRX20	606559159130	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Ibanez	GSR200	606559155354	Electric Guitar	GL-BASS	GC-BASS	GPE-BASS-TSA	G-Tour BASS	GW-Bass
Ibanez	GSR200FM	606559536764	Electric Guitar	GL-BASS	GC-BASS	GPE-BASS-TSA	G-Tour BASS	GW-Bass
Ibanez	GSR205	606559536405	Electric Guitar	GL-BASS	GC-BASS	GPE-BASS-TSA	G-Tour BASS	GW-Bass
Ibanez	IJX121		Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Ibanez	IJX40	606559465927	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Ibanez	IJB190	606559465897	Electric Guitar	GL-BASS	GC-BASS	GPE-BASS-TSA	G-Tour BASS	GW-Bass
Ibanez	JEM7V Steve Vai Signature	606559014521	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Ibanez	JS1000 2002	606559055227	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Ibanez	JS1200 Joe Satriani Signature	606559315598	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Ibanez	RG Series GRG170		Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Ibanez	RG120		Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Ibanez	RG1570	606559222070	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Ibanez	RG2EX1		Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Ibanez	RG350MGX		Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Ibanez	RG370DXGP		Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Ibanez	RG3EXQM1		Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Ibanez	RG4EXQM1		Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Ibanez	RG7321	606559180837	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Ibanez	S520EX		Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Ibanez	SGT120NT	606559468867	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Infocus	LP600	797212615008	Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Insignia	NS-40L240A13		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-LCDCOVER-42	G-TOUR ELIFT 42
Insignia	NS-42E470A13	600603148170	LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Insignia	NS-42L260A13	600603148194	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Insignia	NS-42L550A11		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Insignia	NS-42L780A12		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Insignia	NS-46L240A13	600603146503	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Insignia	NS-50L240A13	600603148163	LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 47
Insignia	NS-50P650A11		LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Insignia	NS-55E60A11		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Insignia	NS-55E790A12		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Insignia	NS-55L260A13	600603146527	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Insignia	NS-L42Q-10A		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Insignia	NS-LCD37-09		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Insignia	NS-LCD47HD-09		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Insignia	NS-P42Q10A		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Insignia	NS-P501Q-10A		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Insignia	NS-P502Q-10A		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Inter-M	A120		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Inter-M	A60		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Inter-M	PA2000		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Inter-M	PA4000		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Inter-M	PAM120		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Inter-M	PAM60		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Jackson	DK2 Dinky		Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Jackson	DK2G Dinky		Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Jackson	DKMG Dinky		Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Jackson	double cut		Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	GWE-Elec	GW-Elec
Jackson	MG Series DXMG Dinky		Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Jackson	SL1 USA Soloist	717669184360	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
JBL	EON15 G2		Speaker	GPA-715	GPA-777	G-TOUR SPKR-215		
JBL	EON1500		Speaker	GPA-715	GPA-777	G-TOUR SPKR-215		
JBL	EON15P-1		Speaker	GPA-715	GPA-777	G-TOUR SPKR-215		
JBL	EON305	050036903608	Speaker	GPA-SCVR450-515	GPA-715	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
JBL	EON315	050036903592	Speaker	GPA-SCVR450-515	GPA-715	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
JBL	EON515	050036903561	Speaker	GPA-SCVR450-515	GPA-715	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
JBL	EON515XT	050036903820	Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
JBL	JRX112M	050036902816	Speaker	GPA-SCVR450-515	GPA-450-515	GPA-7125M	GPA-777	G-TOUR SPKR-212
JBL	MRX512		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212
JBL	MRX512M		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212
JBL	PRX512M		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212
JBL	VRX915M	050036903233	Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-PA TRANSPORT-SM
Johnson	JM60		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Johnson	JT50		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
JVC	GD-V4200PZW		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
JVC	GD-V4210PZW		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
JVC	GD-V4211PCE		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
JVC	GD-V500PZU		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
JVC	GD-V501U		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
JVC	GM-P420UG		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
JVC	GM-V42UG		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
JVC	JLC42BC3000		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
JVC	JLC42BC3002	888268773825	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
JVC	JLC47BC3000		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
JVC	JLC47BC3002	888268773832	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
JVC	PD-42DV2		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 47
JVC	PD-42WV74		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 47
JVC	PD-42WV84		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 47
JVC	PD-42WX84		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 47

Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Kam	CD DJ PACK		DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-LGCD10 (w or w/out ARMI-PL)	G-TOURCOF-LGCD12 (w or w/out ARMI-PL)	
Kempton	GT 12		Speaker	GPA-5CVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212
Kempton	GT 12A		Speaker	GPA-5CVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212
Ketron	AUDYA 5		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Ketron	AUDYA 76		Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Ketron	SD5		Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Ketron	SD8		Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Ketron	Softon SD-1		Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Ketron	5X3000		Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Konka	KDL32AT23U		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-LCDCOVER-42	G-TOUR ELIFT 42
Korg	AX10A		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFIX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Korg	AX10B		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFIX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Korg	AX10G		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFIX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Korg	CX3		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Korg	D1200 MKII		Digital Audio Gear	G-MULTIFIX-2411	GX-1818-6-TSA	GXDF-1116-5-TSA	GU-1711-06-WPDF	G-TOURCARRYONFO
Korg	Electrabe EMX1SD	4959112075610	Digital Audio Gear	G-MULTIFIX-1510	GX-1818-6-TSA	GXDF-1116-5-TSA	GU-1510-06-WPDF	G-TOURCARRYONFO
Korg	Electrabe ESX1SD	4959112075627	Digital Audio Gear	G-MULTIFIX-1510	GX-1818-6-TSA	GXDF-1116-5-TSA	GU-1510-06-WPDF	G-TOURCARRYONFO
Korg	EMX1		Digital Audio Gear	G-MULTIFIX-1510	GX-1818-6-TSA	GXDF-1116-5-TSA	GU-1510-06-WPDF	G-TOURCARRYONFO
Korg	ESX1		Digital Audio Gear	G-MULTIFIX-1510	GX-1818-6-TSA	GXDF-1116-5-TSA	GU-1510-06-WPDF	G-TOURCARRYONFO
Korg	i30		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Korg	KORG M1		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Korg	Kronos 61	4959112081000	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Korg	Kronos 73	4959112081017	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Korg	Kronos 88	4959112081024	Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR 88V2	GKC-1648
Korg	M3-61	4959112053922	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Korg	M3-88	4959112053946	Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR 88V2	GKC-1648
Korg	MP10Pro	4959112075306	Digital Audio Gear	G-MULTIFIX-1510	GX-1818-6-TSA	GXDF-1116-5-TSA	GXDF-1919-7-TSA	
Korg	MS2000		Keyboard	GKC-1540				
Korg	MSR2000B		Keyboard	GKC-1540				
Korg	O1WFD 61		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Korg	Pa3X 61	4959112081826	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Korg	PA50SD	4959112071803	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Korg	PADKONTROL	4959112071797	Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFIX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Korg	PAD-KONTROL		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFIX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Korg	SP-250	4959112041745	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR-76V2SL	GKC-1648
Korg	Trinity Pro X 88		Keyboard	GKB-88	GK-88 XL	GK-88	GKPE-88-TSA	G-TOUR 88V2
Korg	TRITON EXTREME 88		Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR 88V2	GKC-1648
Korg	TRITON STUDIO 61		Keyboard	GKB-76	GK-76	GKPE-61-TSA	G-TOUR 61V2	GKC-1648
Korg	TRITON STUDIO 76		Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR 88V2	GKC-1648
Korg	TRITON STUDIO 88		Keyboard	GKB-88 XL	GK-88 XL	GKPE-88-TSA	G-TOUR 88V2	GKC-1648
Korg	X3		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Korg	ZERO 4		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Korg	ZERO 8		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Kurzweil	K2600		Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Kurzweil	K2600S		Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Kurzweil	K2600X		Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR 88V2	GKC-1648
Kurzweil	K2600XS		Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR 88V2	GKC-1648
Kurzweil	K2661		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Kurzweil	PC161		Keyboard	GKB-61	GK-61 SLIM	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Kurzweil	PC361		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Kurzweil	PC3K6	883793202918	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Kurzweil	PC3LE6	883793202420	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Kustom	KXB20	701963024798	Amp/Cabinet	G-112-ROTO				
Kustom	KXB200H	701963023357	Amp/Cabinet	G-TOURMINIHEAD3				
Kustom	KXB200HR	701963023340	Amp/Cabinet	G-TOURMINIHEAD2				
Kustom	SIENNA 65	701963006565	Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
LG	26LH20		LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
LG	32CS460	719192584044	LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
LG	32CS560	019192584038	LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
LG	32LCS5DC		LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
LG	32LD350		LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
LG	32LD452B	719192902398	LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
LG	32LG70		LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
LG	32LH40		LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
LG	32LK450		LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
LG	32LS3500		LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
LG	32LV2400		LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
LG	37LC-7D		LCD/Plasma	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-LCDCOVER-42	G-TOUR ELIFT 42
LG	42CS560	719192584020	LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
LG	42CS570	719192584006	LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
LG	42LD450		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
LG	42LD452B		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
LG	42LH30		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
LG	42LH40		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
LG	42LK450		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
LG	42LK520		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
LG	42LM5800		LCD/Plasma	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-LCDCOVER-42	G-TOUR ELIFT 42
LG	42LM6200	019192583765	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-LCDCOVER-42	G-TOUR ELIFT 42
LG	42LS5700	019192583826	LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
LG	42LV5500		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
LG	42PA4500	888939001448	LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
LG	42PC3DV		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
LG	42PJ350		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
LG	42PM4700	719192585003	LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
LG	42PQ30C		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
LG	42PT350		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
LG	42PW350		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
LG	47CM565	719192584013	LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
LG	47CS570	888939001615	LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
LG	47LD450		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
LG	47LD452B		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
LG	47LD950C	719192901926	LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
LG	47LG50		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
LG	47LG60		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 47
LG	47LH30		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52

Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
LG	47LH40		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDOCOVER-52
LG	47LH50		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55	G-LCDOCOVER-52
LG	47LK520		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
LG	47LM5800		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
LG	47LM6200	888939001745	LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
LG	47LM7600	019192583673	LCD/Plasma	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDOCOVER-42
LG	47LM7600	019192583659	LCD/Plasma	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDOCOVER-42
LG	47LM8600	019192583635	LCD/Plasma	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDOCOVER-42
LG	47LS4600	888939001677	LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
LG	47LS5700	019192583819	LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
LG	47LW5600		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
LG	47LW6500		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
LG	50PA4500	719192585027	LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
LG	50PA5500	719192584969	LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
LG	50PA6500	019192584922	LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
LG	50PM1M		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
LG	50PM4700	719192584983	LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
LG	50PM6700	019192584885	LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
LG	50PM9700	019192584809	LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
LG	50PQ20		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDOCOVER-52	G-TOUR ELIFT 55
LG	50PQ30C		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDOCOVER-52	G-TOUR ELIFT 55
LG	50PS60C		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
LG	50PV490		LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
LG	50PZ950	019192579843	LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
LG	55LE8500		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
LG	55LM5800	719192585256	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
LG	55LM6200	019192583741	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
LG	55LM6700	019192583666	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
LG	55LM7600	019192583642	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
LG	55LM8600	019192583628	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
LG	55LM9600	019192583604	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
LG	55LS4600	719192585270	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
LG	55LS5700	019192583802	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
LG	55LV3700		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
LG	55LV5500		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
LG	55LW5600		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
LG	55LW6500		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
LG	DU42PX12		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDOCOVER-52	G-TOUR ELIFT 55
LG	M3702C-BA		LCD/Plasma	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-LCDOCOVER-42	G-TOUR ELIFT 42
LG	M4210N-B21		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDOCOVER-42
LG	M4212C-BA		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDOCOVER-42
LG	M4212T-BA		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDOCOVER-42
LG	M4714C-BA		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDOCOVER-52
LG	M4714T-BA		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDOCOVER-52
LG	MU-42PM11		LCD/Plasma	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-LCDOCOVER-42	G-TOUR ELIFT 42
LG	MU-42P211B		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDOCOVER-42
LG	MU-42P215B		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDOCOVER-42
LG	MU50PM10		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
LG	RU42DX11		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDOCOVER-52	G-TOUR ELIFT 55
Line 6	BASS FLOOR POD		Digital Audio Gear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Line 6	BASS POD		Digital Audio Gear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Line 6	BASS POD PRO		Digital Audio Gear	G-MULTIFX-2411	GU-2014-08-WPDF	GU-2217-08-WPDF	G-TOURCARRYONFO	
Line 6	BASS POD XT LIVE		Digital Audio Gear	G-MULTIFX-2411	G-CLUB-CONTROL25	GXDF-1921-6-TSA	GXDF-2030-6-TSA	GU-2217-08-WPDF
Line 6	BASS POD-PRO		Digital Audio Gear	G-MULTIFX-2411	G-CLUB-CONTROL25	GU-2014-08-WPDF	GU-2217-08-WPDF	G-TOURCARRYONFO
Line 6	BOD		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Line 6	FBC		Digital Audio Gear	G-MULTIFX-2411	GU-2014-08-WPDF	GU-2217-08-WPDF	G-TOURCARRYONFO	
Line 6	FBV Express mk II		Digital Audio Gear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Line 6	FBV Shortboard mk II	614252003704	Digital Audio Gear	G-MULTIFX-2411	GU-2014-08-WPDF	GU-2217-08-WPDF	G-TOURCARRYONFO	
Line 6	Floor POD		Digital Audio Gear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Line 6	Floor POD Plus	614252003117	Digital Audio Gear	G-MULTIFX-2411	G-CLUB-CONTROL25	GXDF-1921-6-TSA	GXDF-2030-6-TSA	GU-2217-08-WPDF
Line 6	FM4	721405631421	Digital Audio Gear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Line 6	M 13 STOMPBOX	614252006118	Digital Audio Gear	GX-1818-6-TSA	GXDF-1919-7-TSA	GU-1813-06-WPDF	G-TOURCARRYONFO	
Line 6	M9 STOMPBOX	614252009614	Digital Audio Gear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Line 6	POD 2.0	614252001816	Digital Audio Gear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Line 6	POD HD300	614252009317	Digital Audio Gear	G-MULTIFX-2411	G-CLUB-CONTROL	GU-2014-08-WPDF	GU-2217-08-WPDF	G-TOURCARRYONFO
Line 6	POD XT (SHARC POD)		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Line 6	POD XT LIVE		Digital Audio Gear	G-MULTIFX-2411	G-CLUB-CONTROL25	GXDF-1921-6-TSA	GXDF-2030-6-TSA	GU-2217-08-WPDF
Line 6	POD-Pro		Digital Audio Gear	G-MULTIFX-2411	G-CLUB-CONTROL25	GU-2014-08-WPDF	GU-2217-08-WPDF	G-TOURCARRYONFO
Line 6	StageScape M20d	614252025812	Mixer	G-MIX-B1815	G-MIX-L1822	GMIX-1818-6-TSA	GMIX-STAGESCAPE-WP	G-MIX17X18
Line 6	TONEPORT GX1		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Line 6	XD-V75		Wireless System	GM-1W	GM-1WEVA4	GM-1WP	GM-2W	GM-4WR
LTD	ESP single cut		Les Paul Guitar	GL-Elec	GL-LPS	GC-ELECTRIC-XL	GC-LPS	GPE-Elec-TSA
Mackie	1402 VLZ PRO		Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Mackie	1402-VLZ3		Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Mackie	1604 VLZ PRO		Mixer	G-MIX-B1818	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX19X21	G-TOUR19X21
Mackie	1604-VLZ3	663961009903	Mixer	G-MIX-B1818	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX19X21	G-TOUR19X21
Mackie	16201	663961021998	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Mackie	1642 VLZ Pro		Mixer	G-MIX-B1818	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Mackie	1642-VLZ3		Mixer	G-MIX-B1818	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Mackie	C200	663961028225	Speaker	GPA-450-515	GPA-712SM	GPA-777		
Mackie	C3002	663961028317	Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212
Mackie	CFX 12		Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Mackie	CFX 16		Mixer	G-MIX-B2519	G-MIX-L1622	GMIX-2030-6-TSA	G-MIX20X25	GMC-2222
Mackie	CFX 20		Mixer	G-MIX-L1926	GMIX-2030-6-TSA	GMIX-2030X30	G-TOUR20X25	G-TOUR20X30
Mackie	CFX12mk2		Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Mackie	CONTROL UNIVERSAL	663961029017	Digital Audio Gear	GX-1818-6-TSA	GX-1921-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	GXDF-2225-6-TSA
Mackie	D2		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	GMC-2222
Mackie	d4 Pro		Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Mackie	DL1608	663961035728	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	GMIX-DL1608-WP	G-TOUR12X17
Mackie	DL806		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	GMIX-DL1608-WP	G-TOUR12X17
Mackie	DLM-12S		Speaker	G-SUB2118-17				
Mackie	HUI		Mixer	G-MIX-B1818	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX19X21	G-TOUR19X21
Mackie	MCU Pro	663961029017	Digital Audio Gear	GX-1818-6-TSA	GX-1921-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	GXDF-2225-6-TSA
Mackie	MCU XT Pro		Digital Audio Gear	G-MULTIFX-2411	GX-1818-6-TSA	GXDF-1919-7-TSA	GU-1711-06-WPDF	G-TOURCARRYONFO
Mackie	MS1402-VLZ		Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Mackie	ONYX 1220i	663961022407	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222

Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Mackie	ONYX 1620		Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-8-TSA	G-MIX19X21	G-TOUR19X21
Mackie	ONYX 1620i	663961021998	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Mackie	PPM1012	663961015638	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Mackie	Pro FX12	663961020496	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Mackie	Pro FX16	663961032086	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Mackie	Pro FX22	663961032109	Mixer	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X30	G-TOUR20X25	G-TOUR20X30
Mackie	Pro FX8	663961020489	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Mackie	SRM350		Speaker	GPA-450-515	GPA-7125M	GPA-777		
Mackie	SRM350v2		Speaker	GPA-450-515	GPA-7125M	GPA-777		
Mackie	SRM450		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212
Mackie	SRM450-V2	663961028324	Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212
Mackie	TH-12A	663961031164	Speaker	GPA-SCVR450-515	GPA-450-515	GPA-7125M	GPA-777	G-TOUR SPKR-212
Mackie	DFX 12		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Mackie	DFX 6		Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Mackie	ONYX 1220		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Magnavox	32MD311B	609585214569	LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
Magnavox	32ME402V	609585221796	LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
Magnavox	32MF301B		LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
Magnavox	37MF301B		LCD/Plasma	G-LCDCOVER-42	G-TOUR ELIFT 42			
Magnavox	39MF412B	609585222953	LCD/Plasma	G-LCDCOVER-42	G-TOUR ELIFT 42			
Magnavox	40MF401B		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Magnavox	46MF401B		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Marantz	CDR310	699927011253	Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Marantz	PD4293D		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Marantz	PDS010D		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCDLIFT55	G-TOUR ELIFT 55
Marantz	PMD 671	699927441067	Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Marantz	PMD671	699927441067	Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Martin	Cowboy V		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	D12-28	729789046909	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	D12X1		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	D-15	729789399630	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	D-16GT	729789001311	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	D-16RGT	729789365840	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	D-18VE		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	D-28	729789010405	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	D-35	729789011808	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	D-42		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	DC-15E		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	DC-16RE Aura		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	DC-16RGE Aura		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	DC-28E		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	DCME		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	DCX1E	729789365383	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	DCX1KE		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	DM		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	DM12		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	DR		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	DSR		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	DX1		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	DX1E		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	DX1K		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	DXM		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	HD-16R LSH		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	HD-28	729789064002	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	HD-28V		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	HD-28VE	729789377928	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	M-42		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	MMW		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Martin	SWDGT	729789365956	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
M-Audio	BLACK BOX		Digital Audio Gear	G-BROADCASTER	G-MULTIFX-1110	GXDF-1116-5-TSA	GU-1309-06-WPDF	
M-Audio	FIREWIRE 1814		Digital Audio Gear	G-TABLETMIX-BAG	G-BROADCASTER	G-MULTIFX-1110	GXDF-1116-5-TSA	GU-0907-05-WPDF
M-Audio	FIREWIRE 410		Digital Audio Gear	G-TABLETMIX-BAG	G-BROADCASTER	G-MULTIFX-1110	GXDF-1116-5-TSA	GU-0907-05-WPDF
M-Audio	NRV10		Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	GMC-2222
M-Audio	PROJECT MIX I/O		Digital Audio Gear	GX-1921-6-TSA	GX-2225-6-TSA	GXDF-1921-6-TSA	GXDF-2225-6-TSA	
M-Audio	TORQ XPONENT	612391800185	Mixer	G-MIX-B1815	G-MIX-L1224	GMIX-1818-6-TSA	G-MIX12X24	GMC-2222
M-Audio	TRIGGERFINGER		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GXDF-1919-7-TSA
Maxent	MX-42VM10		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	
Mesaboogie	112 WIDE BODY		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Mesaboogie	212 LONESTAR		Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Mesaboogie	ELECTRA DYNE 1X12 COMBO		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Mesaboogie	ELECTRA DYNE 2X12 COMBO		Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Mesaboogie	EXPRESS 5:50 1x12 COMBO		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Mesaboogie	LONE STAR 1x12 COMBO		Amp/Cabinet	G-112-ROTO	G-TOUR AMP112	G-212-ROTO		
Mesaboogie	LONE STAR 2x12 COMBO		Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Mesaboogie	Mark V		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Mesaboogie	MKV 1X12 COMBO		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Mesaboogie	ROYAL ATLANTIC 2x12 COMBO		Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Mesaboogie	TRANSATLANTIC TA-30 1X12COMBO		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Mesaboogie	TRANSATLANTIC TA-30 2X12 COMBO		Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Meyer Sound	M1D SUB		Speaker	GPA-777	G-TOUR SPKR-212	G-PA TRANSPORT-SM		
Microtek	MHP1		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Mitchell	MD100		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Mitchell	MD100S	656238011976	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Mitchell	MD100S12		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Mitsubishi	LD7551V		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCDLIFT55	G-TOUR ELIFT 55
Mitsubishi	MDT421S		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Mitsubishi	MDT521S		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Mitsubishi	PD-5010		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCDLIFT55	G-TOUR ELIFT 55
Mitsubishi	XD430U		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL

Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Motu	TRAVELER		Digital Audio Gear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GLI-1510-06-WPDF	G-TOURCARRYONFO
Nady	CMX16A		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Nady	NMX1212		Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Nady	PRM400		Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Nady	SRM12X		Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Native Instruments	S4		DJ Controller	G-CLUB CONTROL 25	G-TOUR NIS4	G-TOUR NIS4K	G-TOUR NIS4-ARM1-PL	
Native Instruments	Traktor Kontrol S4	4042477209001	DJ Controller	G-CLUB CONTROL 25	G-TOUR NIS4	G-TOUR NIS4K	G-TOUR NIS4-ARM1-PL	
NEC	4200		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
NEC	4205		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
NEC	4210		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
NEC	5000		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCDLIIFT55	G-TOUR ELIFT 55
NEC	42MP1		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
NEC	42MP2		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
NEC	42MP4		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
NEC	42PD1		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
NEC	42PD2		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
NEC	42VP4		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
NEC	42VPS & 42VPSA		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
NEC	42XM3		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
NEC	42XM3A		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
NEC	50MP1		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCDLIIFT55	G-TOUR ELIFT 55
NEC	50MP2		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCDLIIFT55	G-TOUR ELIFT 55
NEC	50MP3		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCDLIIFT55	G-TOUR ELIFT 55
NEC	50XM3		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCDLIIFT55	G-TOUR ELIFT 55
NEC	50XM4A		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCDLIIFT55	G-TOUR ELIFT 55
NEC	50XM5		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCDLIIFT55	G-TOUR ELIFT 55
NEC	50XR4A		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCDLIIFT55	G-TOUR ELIFT 55
NEC	ACCUSYNC 92VX		LCD/Plasma	GL-LCD-1922	G-MONITOR2-GO19	G-MONITOR2-GO22		
NEC	E421		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
NEC	E422	805736039139	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
NEC	E461		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
NEC	E462	805736039146	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
NEC	LT150Z		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
NEC	NP400	805736024401	Projector	GAV-LTOFFICE	G-TOURCARRYONPL			
NEC	NP500W		Projector	GAV-LTOFFICE	G-TOURCARRYONPL			
NEC	P42XC10		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURCDLIIFT55	G-LCDCOVER-42
NEC	P42XP10-BK		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURCDLIIFT55	G-LCDCOVER-42
NEC	P462-AVT	805736038736	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURCDLIIFT55	G-LCDCOVER-42	G-TOUR ELIFT 42
NEC	P50XC10		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCDLIIFT55	G-LCDCOVER-52
NEC	P50XP10		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCDLIIFT55	G-LCDCOVER-52
NEC	P552	805736037937	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCDLIIFT55	G-TOUR ELIFT 55
NEC	P552-AVT		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCDLIIFT55	G-TOUR ELIFT 55
NEC	PX-42V5RA		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
NEC	PX-42VMA		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
NEC	PX-42VP4A		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
NEC	PX-42XM2A		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
NEC	V422	805736037906	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
NEC	V422-AVT	805736039504	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
NEC	V462	805736037913	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
NEC	V551		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCDLIIFT55	G-TOUR ELIFT 55
NEC	V551-AVT		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCDLIIFT55	G-TOUR ELIFT 55
NEC	X551S		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURCDLIIFT55	G-TOUR ELIFT 55
Novation	Impulse61	815301000426	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Numark	5000FX		DJ Mixer	G-TOUR MIX 12	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)		
Numark	AXIS 2		DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000			
Numark	AXIS 4		DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000			
Numark	AXIS 8		DJ CD Player	G-CLUB CDMX-10	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)		
Numark	AXIS 9		DJ CD Player	G-CLUB CDMX-10	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)		
Numark	CD2CD		DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000			
Numark	CDMix1		DJ CD Player	G-TOUR TT1200				
Numark	CDMIX2		DJ CD Player	G-TOUR TT1200				
Numark	CDMIX3	676762811514	DJ CD Player	G-TOUR TT1200				
Numark	DJ2GO	6767622192118	DJ Controller	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
Numark	DM2050		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
Numark	DXMPRO		DJ Mixer	G-CLUB CDMX-10	G-CLUB CONTROL	G-TOUR MIX 10	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
Numark	iCDX		DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000			
Numark	M3	676762158213	DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
Numark	NDX200	676762260114	DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-SMCD10	G-TOURCOF-SMCD12	
Numark	NDX400	676762261111	DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-SMCD10	G-TOURCOF-SMCD12	
Numark	NDX900	676762262217	DJ CD Player	G-CLUB CDMX-12	G-TOUR CD 2000			
Numark	NS6	676762187510	DJ Controller	G-CLUB CONTROL 25	G-TOUR NS6	G-TOUR NS6K	G-TOUR NS6-ARM1-PL	G-TOUR NS6-ARM2-PL
Numark	PPD01		DJ Mixer	G-CLUB CONTROL	G-TOUR MIX 10	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)		



Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Numark	VJ01		DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000			
Numark	X5	676762163118	DJ Mixer	G-CLUB CONTROL	G-TOUR MIX 10	G-TOURCOF-LGCD12 (w		
Numark	X9	676762130219	DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-LGCD12 (w		
Optoma	EZ PRO 716		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	G-TOURCARRYONPL		
Optoma	EZ PRO 719		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	G-TOURCARRYONPL		
Optoma	EZ PRO 732		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Orange	Rocker 30		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Orange	Signature #4 Jim Root							
Orange	PPC212	5060299170148	Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Panasonic	46PZ80U		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 47
Panasonic	46PZ85U		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 47
Panasonic	PT-37PD1		LCD/Plasma	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-LCDCOVER-42	G-TOUR ELIFT 42
Panasonic	PT-42P1		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Panasonic	PT-50PD3-P		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Panasonic	PTLB10SVU		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Panasonic	PT-LB10U		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Panasonic	PTLB10VU		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Panasonic	PT-LB20NTU		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Panasonic	PTLB20SU		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Panasonic	PTLB20U		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Panasonic	PTLB20VU		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Panasonic	PTLB30		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Panasonic	PTLB30NTU		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Panasonic	PTLB50NTU		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Panasonic	PTLB50SU		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Panasonic	PTLB50U		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Panasonic	PTLB60NTU		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Panasonic	PTLB60U		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Panasonic	PT-LM1		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Panasonic	PT-LM2		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Panasonic	TC-37P1F		LCD/Plasma	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-LCDCOVER-42	G-TOUR ELIFT 42
Panasonic	TC-50PX14		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Panasonic	TC-L42D30		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Panasonic	TC-L42E50		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Panasonic	TC-L42ET5	885170076433	LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Panasonic	TC-L42U30		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Panasonic	TC-L42U5	885170076532	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Panasonic	TC-L47D750	885170076402	LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Panasonic	TC-L47E50	885170076471	LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
Panasonic	TC-L47E75	885170076426	LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
Panasonic	TC-L47WT50	885170076389	LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Panasonic	TC-L55E50	885170076457	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Panasonic	TC-L55E75	885170076419	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Panasonic	TC-L55WT50	885170076372	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Panasonic	TC-P42C2		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-TOUR ELIFT 42
Panasonic	TC-P42S1		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-TOUR ELIFT 42
Panasonic	TC-P42S2		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-TOUR ELIFT 42
Panasonic	TC-P42U1		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-TOUR ELIFT 42
Panasonic	TC-P42X1		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-LCDCOVER-42	G-TOUR ELIFT 42
Panasonic	TC-P46G10		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-LCDCOVER-52	G-TOUR ELIFT 47
Panasonic	TCP46S1		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-LCDCOVER-52	G-TOUR ELIFT 47
Panasonic	TC-P46S30		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Panasonic	TCP46U1		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Panasonic	TC-P5032C		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Panasonic	TC-P50G10		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Panasonic	TC-P50G75		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Panasonic	TC-P50G730		LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Panasonic	TC-P50S1		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Panasonic	TC-P50S30		LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Panasonic	TC-P50S730		LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Panasonic	TC-P50S750	885170075917	LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Panasonic	TC-P50U1		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Panasonic	TC-P50U50	888278468254	LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Panasonic	TC-P50VT25		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Panasonic	TC-P50X1		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Panasonic	TC-P50X3	888278467882	LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Panasonic	TC-P55GT30		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Panasonic	TC-P55GT31		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Panasonic	TC-P55GT50	885170075856	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Panasonic	TC-P55S750	888278468209	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Panasonic	TC-P55UT50	888278468230	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Panasonic	TC-P55VT30		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT65	G-TOURCDP60	G-LCDCOVER-65
Panasonic	TC-P55VT50	885170075825	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Panasonic	TH-42LRU30	885170042773	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Panasonic	TH-42PDD3B		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Panasonic	TH-42PF11UK		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Panasonic	TH-42PH11UK		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Panasonic	TH-42PH9UK		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Panasonic	TH-42PHD5UY		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Panasonic	TH-42PHD6		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Panasonic	TH-42PHD6UY		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Panasonic	TH-42PHD7UY		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Panasonic	TH-42PHD8UK		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Panasonic	TH42P9UK		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Panasonic	TH-42PWD3U		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Panasonic	TH-42PWD5UY		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Panasonic	TH-42PWD6UY		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Panasonic	TH-42PX600U		LCD/Plasma	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55
Panasonic	TH-42PX60U		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-TOUR ELIFT 42
Panasonic	TH46PZ80U		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 47
Panasonic	TH46PZ85U		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 47
Panasonic	TH-50PF11UK		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Panasonic	TH-50PF20U		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Panasonic	TH50PF9UK		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Panasonic	TH-50PH11UK		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55

Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Panasonic	TH-50PH9		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Panasonic	TH-50PH9UK		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Panasonic	TH-50PHD3U		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Panasonic	TH-50PHD5UY		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Panasonic	TH-50PHD7UY		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Panasonic	TH-50PX		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Panasonic	TH-50THD6UI		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Panasonic	TH-50THD6UY		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Parkwood	PW310M		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Peavey	16FX	014367118391	Mixer	G-MIX-B2519	GMIX-1921-8-TSA	GMIX-2225-8-TSA	G-MIX20X25	
Peavey	24FX	014367134827	Mixer	G-MIX-B2519	GMIX-2030-8-TSA	GMIX-2225-8-TSA	G-MIX20X25	
Peavey	MAX 112	014367614770	Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Peavey	NASHVILLE 1000		Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Peavey	NASHVILLE 112	014367099621	Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Peavey	PR 12 NEO	014367123876	Speaker	GPA-SCVR450-515	GPA-777	G-TOUR SPKR-212		
Peavey	PV 15M	014367122336	Speaker	GPA-SCVR450-515	GPA-712LG	G-TOUR SPKR-212		G-PA TRANSPORT-SM
Peavey	PV10	014367112870	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Peavey	PV14	014367112887	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Peavey	PV20		Mixer	G-MIX-B2519	G-MIX-L1622	GMIX-2030-6-TSA	G-MIX20X25	GMC-2222
Peavey	PV20 USB	014367122046	Mixer	G-MIX-B2519	G-MIX-L1622	GMIX-2030-6-TSA	G-MIX20X25	GMC-2222
Peavey	RQ 1606M		Mixer	GMIX-2030-6-TSA	G-MIX24X36	G-MIX24X36	G-TOUR20X25	G-TOUR20X30
Peavey	RQ 2310		Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Peavey	RQ 2314		Mixer	G-MIX-B2519	G-MIX-L1926	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Peavey	RQ 2318		Mixer	G-MIX-B2519	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X25	G-TOUR20X30
Peavey	STUDIO PRO 112		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Peavey	TRANSTUBE 112 EFX		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Peavey	TRIPLE XXX		Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Peavey	TRIPLE XXX 112		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Peavey	TRIPLE XXX 212		Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Peavey	UNITY 1002-8 RQ		Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Peavey	VALVEKING 112	014367116632	Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Peavey	VALVEKING 212	014367117288	Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Peavey	Vypyr Tube 120	014367140002	Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Peavey	Vypyr30	014367139914	Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Peavey	XR 1212	014367140156	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Peavey	XR 1220	014367140163	Mixer	G-MIX-B2519	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X25	G-TOUR20X30
Peavey	XR 800F PLUS		Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-8-TSA	G-MIX19X21	G-TOUR19X21
Peavey	XR1220	014367140163	Mixer	G-MIX-B2519	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X25	G-TOUR20X30
Philips	20PF5120		LCD/Plasma	GL-LCD-1922	G-MONITOR2-G022	G-TOURLCDP-2023		
Philips	37PF9631D		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-TOUR ELIFT 42
Philips	40PFL3706/F7	609585208445	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Philips	40PFL4707/F7	609585223547	LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Philips	40PFL4907/F7	609585223547	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Philips	40PFL5706/F7	609585201637	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Philips	40PFL7705DV/F7		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Philips	40PFL7705DV/F7B		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Philips	42FD9932		LCD/Plasma	G-LCD-4647	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Philips	42FD9934		LCD/Plasma	G-LCD-4647	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Philips	42FD9935		LCD/Plasma	G-LCD-4647	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Philips	42FD9954		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Philips	42FD9955		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 55	G-LCDCOVER-52
Philips	42PW9962		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Philips	42PW9982		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Philips	46PFL3706/F7	609585208452	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Philips	46PFL4706/F7	609585201651	LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
Philips	46PFL5706/F7		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Philips	47PFL3603D/27		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Philips	47PFL7403D/27		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47	G-LCDCOVER-52
Philips	50FD9955		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Philips	50PFL3707/F7	609585223516	LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Philips	50PFL3807/F7	609585223523	LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Philips	55PFL4706/F7	609585205369	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Philips	55PFL5706/F7		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Phonic	HELIX 18FW		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Phonic	HELIX BOARD 17		Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Phonic	MM1805(X)		Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Phonic	MR 1843X		Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Phonic	POWERPOD 1840		Mixer	G-MIX-B2118	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21	GMC-2222
Phonic	POWERPOD 1860II		Mixer	G-MIX-B2118	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21	GMC-2222
Phonic	POWERPOD 2280		Mixer	G-MIX-B2519	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X25	GMC-2222
Phonic	Powerpod K12 Plus		Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Pioneer	CDJ-1000 MK III		DJ CD Player	G-CLUB CDMX-12	G-TOUR CD 2000	G-TOURCOF-LGCD10 (w	G-TOURCOF-LGCD12 (w	
Pioneer	CDJ-1000 MK3		DJ CD Player	G-CLUB CDMX-12	G-TOUR CD 2000			
Pioneer	CDJ-1000 MKII		DJ CD Player	G-CLUB CDMX-12	G-TOUR CD 2000			
Pioneer	CDJ-1005		DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000			
Pioneer	CDJ-200	012562735092	DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-SMCD10	G-TOURCOF-SMCD12	
Pioneer	CDJ-2000	012562966267	DJ CD Player	G-CLUB CDMX-12	G-TOUR CD 2000	G-TOURCOF-LGCD10 (w	G-TOURCOF-LGCD12 (w	
Pioneer	CDJ-2000 Nexus	884938168717	DJ CD Player	G-CLUB CDMX-12	G-CD2000-WP	G-TOUR CD 2000	G-TOURCOF-LGCD10 (w	G-TOURCOF-LGCD12 (w
Pioneer	CDJ-350	884938110945	DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-SMCD10	G-TOURCOF-SMCD12	
Pioneer	CDJ-400		DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-SMCD10	G-TOURCOF-SMCD12	
Pioneer	CDJ-800		DJ CD Player	G-TOURCOF-LGCD10 (w	G-TOURCOF-LGCD12 (w	G-TOURCOF-LGCD10 (w	G-TOURCOF-LGCD12 (w	
Pioneer	CDJ-800		DJ CD Player	G-TOURCOF-LGCD10 (w	G-TOURCOF-LGCD12 (w	G-TOURCOF-LGCD10 (w	G-TOURCOF-LGCD12 (w	
Pioneer	CDJ-800MK2		DJ CD Player	G-TOURCOF-LGCD10 (w	G-TOURCOF-LGCD12 (w	G-TOURCOF-LGCD10 (w	G-TOURCOF-LGCD12 (w	
Pioneer	CDJ-850	884938114646	DJ CD Player	G-CLUB CDMX-12	G-TOUR CD 2000	G-TOURCOF-LGCD10 (w	G-TOURCOF-LGCD12 (w	
Pioneer	CDJ-900	012562966311	DJ CD Player	G-CLUB CDMX-12				
Pioneer	DDJ-SX	884938196512	DJ Controller	G-TOUR-DDJ-SX ARM				
Pioneer	DJM-300		DJ Mixer	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-SMCD10	G-TOURCOF-LGCD10 (w	
Pioneer	DJM-300S		DJ Mixer	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-SMCD10	G-TOURCOF-LGCD10 (w	
Pioneer	DJM-400		DJ Mixer	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-SMCD10	G-TOURCOF-LGCD10 (w	
Pioneer	DMP-555		DJ CD Player	G-TOUR CD 2000	G-TOURCOF-LGCD10 (w	G-TOURCOF-LGCD12 (w		
Pioneer	DVI-1000	012562821481	DJ CD Player	G-CLUB CDMX-12	G-TOUR CD 2000	G-TOUR T1200		
Pioneer	EFX1000	012562703947	DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
Pioneer	PDP 505CMX		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55

Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Pioneer	PDP 5070HD		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Pioneer	PDP-4050HD		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Pioneer	PDP-4304		LCD/Plasma	G-LCD-4647	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-TOUR ELIFT 42
Pioneer	PDP-4330HD		LCD/Plasma	G-LCD-4647	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-TOUR ELIFT 42
Pioneer	PDP-4330HD W/SPKS		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Pioneer	PDP-433CMX		LCD/Plasma	G-LCD-4647	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-TOUR ELIFT 42
Pioneer	PDP-4340HD		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Pioneer	PDP-501		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Pioneer	PDP-502		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Pioneer	PDP-5020FD		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Pioneer	PDP-502MX		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Pioneer	PDP-5030HD		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Pioneer	PDP-503CMX		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Pioneer	PDP-5040HD		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Pioneer	PDP-505HD		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Pioneer	PDP-507CMX		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Pioneer	PDP-50MXE		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Pioneer	PDP-910HD		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Pioneer	PRO-1110HD		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Planar	PDP42B		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Plasmasync	4210W		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Plus	U2-1200		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Plus	U4136		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Plus	U4232		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Plus	U5-111		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Plus	U5-112		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Plus	U5132		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Plus	U5-232		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Plus	U5-332		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Plus	XU4-136		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Polycorn	SOUNDSTATION2	610807033479	Digital Audio Gear	G-CLUB-CONTROL	GX-1818-6-TSA	GXDF-1919-7-TSA	G-TOURCARRYONFO	
Presonus	StudioLive 16.0.2	673454001253	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	GMIX-PRESON1602-WP	G-TOUR19X21
Presonus	StudioLive 16.4.2	673454000607	Mixer	G-MIX-B2519	GMIX-2225-8-TSA	G-MIX20X25	G-TOURPRE1642	G-TOURPRE1642-ARM1
Proel	M1000USB		Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Proel	M16USB		Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Proel	M20USB		Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-MIX24X36	G-TOUR20X25	G-TOUR20X30
Proel	M20USB 20		Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-MIX24X36	G-TOUR20X25	G-TOUR20X30
Proel	M500USB		Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Proel	M8USB		Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Projection Design	Action! M20		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	G-TOURCARRYONPL		
Projection Design	cineo20		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	G-TOURCARRYONPL		
Projection Design	evo22sx+		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	G-TOURCARRYONPL		
Projection Design	F22 series		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	G-TOURCARRYONPL		
Proscan	40LC455		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Pyle-Pro	PYD1010		Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	GMC-2222
Pyle-Pro	PYD1015		Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	GMC-2222
Pyle-Pro	PYD1020		Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	GMC-2222
QSC	K12	684284055316	Speaker	GPA-SCVR450-515	GPA-450-515	GPA-7125M	GPA-777	G-TOUR SPKR-212
Raimundo	Model 125		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Class
Raimundo	Model 128		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Class
Raimundo	Model 130		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Class
Raimundo	Model 146		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Class
Raimundo	Model 148		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Class
Ramirez	125 Anos	809870040259	Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Class
Ramirez	1E		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Class
Ramirez	2E		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Class
Ramirez	4E		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Class
Ramirez	AE		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Class
Ramirez	FL2		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Class
Ramirez	GH George Harrison Model		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Class
Ramirez	R1	809870023917	Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Class
Ramirez	R2	809870924221	Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Class
Ramirez	R4		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Class
Ramirez	S1		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Class

Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Rane	Empath		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
Rane	GRANDMASTER FLASH		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
Rane	Sixty-Eight	687499176302	DJ Mixer	G-CLUB CDMX-12	G-TOUR CD 2000	G-TOUR MIX 12	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)
Rane	Sixty-Eight	687499176302	DJ Mixer	G-CLUB CDMX-12	G-TOUR CD 2000	G-TOUR MIX 12	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)
Rane	TTM 56S	687499175923	DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
Rane	TTM56		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
Rane	TTM57SL	687499146596	DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
RCA	32LB45RQ	883393001638	LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
RCA	42LB45RQ	883393003427	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 47	G-LCDCOVER-42
RCA	46LA45RQ		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 42	G-LCDCOVER-52
RCA	46LA55R120Q		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
RCA	50LB45RQ	883393003557	LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 47
RCA	50PA30RQ		LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
RCA	L46FHD37		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-LCDCOVER-52	G-TOUR ELIFT 47
RCA	LED46A55R12		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
RCA	PH50300		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
RCA	PH50400		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
RCA	PH50500		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
RCA	PR42300		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Revox	E-642		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Revox	E-650		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Rivera	Clubster Royale 1x12		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Rivera	Fandango 112		Amp/Cabinet	G-112A	G-TOUR AMP112	G-212-ROTO		
Rivera	Quiana 50 212		Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Rivera	Quiana Studio 112		Amp/Cabinet	G-112A	G-TOUR AMP112	G-212-ROTO		
Rivera	Sedona55ES		Amp/Cabinet	G-112A	G-TOUR AMP112	G-212-ROTO		
Rocktron	UTOPIA G100	737681800314	Digital Audio Gear	GX-1818-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	GU-1813-06-WPDF	GU-2014-08-WPDF
Rocktron	UTOPIA G200	737681420307	Digital Audio Gear	GX-1818-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	GU-1813-06-WPDF	GU-2014-08-WPDF
Rogue	Herringbone	840246021571	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Rogue	Honduran		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Rogue	RA-100		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Roland	AX-Synth	761294073841	Keyboard	GK-76-SLIM	GKPE-76-TSA			
Roland	BA-330	761294410202	Speaker	GPA-777	G-PA TRANSPORT-SM			
Roland	BK5	761294502037	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Roland	CD2E		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Roland	CD-2I	761294412145	Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Roland	DJ-2000		Digital Audio Gear	GXDF-1919-7-TSA	GXDF-1921-6-TSA	GXDF-2030-6-TSA	GU-2014-08-WPDF	G-TOURCARRONFO
Roland	DR880	761294085592	Digital Audio Gear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Roland	E09	761294400340	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Roland	EP880		Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR 88V2	GKC-1648
Roland	EXR-3		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Roland	EXR46-OR		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Roland	EXR-5		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Roland	FANTOM G6	761294089682	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Roland	FANTOM G7		Keyboard	GKB-76	GK-76	GKPE-76D-TSA	G-TOUR 76V2	GKC-1648
Roland	FANTOM X6		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Roland	FANTOM XA 61		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Roland	FC-300	761294401026	Digital Audio Gear	G-MULTIFX-2411	G-CLUB-CONTROL25	GU-2217-08-WPDF		
Roland	G-1000		Keyboard	GKB-76	GK-76	GKPE-76D-TSA	G-TOUR 76V2	GKC-1648
Roland	GR20		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	
Roland	GR20S		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	
Roland	GR-33		Digital Audio Gear	G-MULTIFX-2411	GX-1818-6-TSA	GXDF-1919-7-TSA	GU-1813-06-WPDF	G-TOURCARRONFO
Roland	GR-55	761294413241	Digital Audio Gear	G-MULTIFX-2411	G-CLUB-CONTROL	GXDF-1116-5-TSA	GU-1711-06-WPDF	G-TOURCARRONFO
Roland	GW-7		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Roland	GW-8	761294408179	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Roland	Jupiter 80	761294500804	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Roland	JV30		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Roland	M-300	761294411568	Mixer	G-MIX-B2519	GMIX-1921-8-TSA	GMIX-2225-8-TSA	G-MIX20X25	
Roland	MC-307		Digital Audio Gear	G-MULTIFX-2411	GX-1818-6-TSA	GXDF-1919-7-TSA	GU-1711-06-WPDF	G-TOURCARRONFO
Roland	MC-909		Digital Audio Gear	GX-1921-6-TSA	GXDF-1921-6-TSA	GXDF-2030-6-TSA	GXDF-2225-6-TSA	GU-2217-08-WPDF
Roland	MOBILE CUBE	761294406854	Amp/Cabinet	G-TOURMINIHEAD1				
Roland	MV-8800		Digital Audio Gear	GX-1921-6-TSA	GX-2225-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	GXDF-2030-6-TSA
Roland	Prelude	761294409473	Keyboard	GKB-61	GK-61-SLIM	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Roland	R-4Pro	761294400678	Digital Audio Gear	G-MULTIFX-1110	GXDF-1116-5-TSA	GU-1309-06-WPDF		
Roland	RD-600		Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR 88V2	GKC-1648
Roland	RS-50		Keyboard	GKB-61	GK-61-SLIM	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Roland	RS-70		Keyboard	GKB-61	GK-61-SLIM	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Roland	SH-32		Digital Audio Gear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Roland	SP-404		Digital Audio Gear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Roland	SP-404SX	761294410714	Digital Audio Gear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Roland	SP-606		Digital Audio Gear	G-CLUB-CONTROL	GX-1818-6-TSA	GXDF-1116-5-TSA	GXDF-1919-7-TSA	G-TOURCARRONFO
Roland	TD-9	761294403242	Digital Audio Gear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Roland	V SYNTH		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Roland	V SYNTH GT	761294403051	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Roland	VA-76		Keyboard	GKB-76	GK-76	GKPE-76D-TSA	G-TOUR 76V2	GKC-1648
Roland	VK-8M	761294081662	Digital Audio Gear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Roland	VR-5	761294412121	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Roland	VR-700	761294401323	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Roland	VR760		Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Roland	VS-2000CD		Digital Audio Gear	GX-1921-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	GU-2217-08-WPDF	
Roland	VS-2400CD		Digital Audio Gear	GX-1921-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	GU-2217-08-WPDF	
Roland	XP-50		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Roland	XV-88		Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR 88V2	GKC-1648

Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Runco	PL-42		LCD/Plasma	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-LCDCOVER-42	G-TOUR ELIFT 42
Runco	PL 50C		LCD/Plasma	G-LCD-5052	G-TOURLCD5055X2	G-TOURLCD5055X2	G-TOUR ELIFT 55	G-LCDCOVER-52
Sampo	PME-4256		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sampo	PME-42X6		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sampo	PME-50X6		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Samson	612M	809164007876	Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
Samson	L1200	809164009474	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Samson	L612		Speaker	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215		
Samson	MDR10		Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Samson	MDR1248		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Samson	MDR1688		Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Samson	RS10HD		Speaker	GPA-777	G-TOUR SPKR-212			
Samson	RS10mHD		Speaker	GPA-777	G-TOUR SPKR-212			
Samson	SR266		Wireless System	GM-1W	GM-1WEVA	GM-1WP	GM-2W	G-IN EAR SYSTEM
Samson	SZONE	809164003731	Digital Audio Gear	G-MULTIFX-2411	G-CLUB-CONTROL	G-CLUB-CONTROL25	GU-2014-08-WPDF	G-TOURCARRYONFO
Samson	TM 300		Mixer	G-MIX-B2118	G-MIX-L1822	G-MIX19X21	G-MIX20X25	GMC-2222
Samson	TM 500		Mixer	G-MIX-B2118	G-MIX-L1822	G-MIX19X21	G-MIX20X25	GMC-2222
Samsung	400CX		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Samsung	400CXN		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Samsung	400FP-2	729507808635	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Samsung	400FPN-2	729507808673	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Samsung	400TSN-2	729507810737	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-LCDCOVER-42
Samsung	403T		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR LCDLIFT55	G-TOUR ELIFT 42
Samsung	460CX		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Samsung	460CXN		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Samsung	460DR		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Samsung	460DRN		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Samsung	460FP-2	729507808642	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Samsung	460FPN-2		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Samsung	570DX		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65
Samsung	570DXN		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65
Samsung	HPL-5025		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Samsung	HPN-4239		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-TOUR ELIFT 42
Samsung	HPN5039		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Samsung	HP-P4271		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Samsung	HP-R5052		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Samsung	HP-S5053		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Samsung	LN26B460		LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
Samsung	LN26D450G1D		LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
Samsung	LN32A550		LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
Samsung	LN32D403	888290004171	LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
Samsung	LN32D450G1D		LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
Samsung	LN37B550		LCD/Plasma	G-LCDCOVER-42	G-TOUR ELIFT 42			
Samsung	LN37B650		LCD/Plasma	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-LCDCOVER-42	G-TOUR ELIFT 42
Samsung	LN37D550K1		LCD/Plasma	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-LCDCOVER-42	G-TOUR ELIFT 42
Samsung	LN40A550		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-TOUR ELIFT 42
Samsung	LN40A650		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-TOUR ELIFT 42
Samsung	LN40A750		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-TOUR ELIFT 42
Samsung	LN40B530		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-TOUR ELIFT 42
Samsung	LN40B550		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-TOUR ELIFT 42
Samsung	LN40B630		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Samsung	LN40C630K1F		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-TOUR ELIFT 42
Samsung	LN40D630M3		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-TOUR ELIFT 42
Samsung	LN40E550F7FZA	036725237438	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-TOUR ELIFT 42
Samsung	LN46A550		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Samsung	LN46A650		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Samsung	LN46A750		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 47
Samsung	LN46B530		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Samsung	LN46B550		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Samsung	LN46B640		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Samsung	LN46B650		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Samsung	LN46B750		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Samsung	LN46C630		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Samsung	LN46C630K1F		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Samsung	LN46D610M4F		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Samsung	LN46D630		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Samsung	LN46D630M3F		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Samsung	LN46E550	036725237445	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Samsung	LN52A750		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Samsung	LN52A850		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65
Samsung	LN52B550		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Samsung	LN52B750		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Samsung	LN52C530F1F		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Samsung	LN55B640		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65
Samsung	LN55C630		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Samsung	LN55C630K1F		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Samsung	LN55296D		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Samsung	LN-SS296D		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Samsung	P4ZH		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Samsung	P4ZHP		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Samsung	P50FP		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Samsung	P50H		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Samsung	P50HP		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Samsung	PDP-50VG		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Samsung	PN42B450		LCD/Plasma	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Samsung	PN42C430		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Samsung	PN42C450B1D		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Samsung	PN43D450A2D		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Samsung	PN43E450A1FZA		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Samsung	PN50B450		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Samsung	PN50B550		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Samsung	PN50B650		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Samsung	PN50C450		LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Samsung	PN50C550G1F		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Samsung	PN50C590G4		LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Samsung	PN50C8000YF		LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Samsung	PN51D440A5D		LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55





Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Samsung	UN55ES8000FXZA	036725237308	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Samsung	UN60D8000YF		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65
Samsung	UN60E57100F		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65
Samsung	UN60ES8000		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65
Samsung	UN60ES8000FXZA	036725237315	LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65
Sansui	HDLCD4050	755805821007	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sansui	HDLCD4650	755805821083	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Sansui	HDLCD5050	755805821106	LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Sansui	SLED3228		LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
Sansui	SLED3280	755805820949	LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
Sansui	SLED4280		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Sansui	SLED4650		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
Sansui	SLED4680		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
Sanyo	DP42840		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sanyo	DP42841	086483079641	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sanyo	DP42851		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sanyo	DP42861		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sanyo	DP46840		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Sanyo	DP46841		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Sanyo	DP47460		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Sanyo	DP50740		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Sanyo	DP50741		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Sanyo	DP50749		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Sanyo	DP50842		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Sanyo	FVM5082		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Sanyo	PDP-42H1AN		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sanyo	PID-42AE1		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sanyo	PLC-SU51		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Sanyo	PLC-SW30		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Sanyo	PLC-SW35		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Sanyo	PLC-X25A		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Sanyo	PLC-XU100		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Sanyo	PLC-XU41		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Sanyo	PLC-XU47		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Sanyo	PLC-XU48		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Sanyo	PLC-XU51		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Sanyo	PLC-XU55A		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Sanyo	PLC-XU56		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Sanyo	PLC-XU58		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Sanyo	PLC-XU73		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Sanyo	PLC-XU86		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Sanyo	PLCXW55		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Sceptre	X375V-NAGA		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Seagull	The Original S6	623501029396	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Seiki	LC40G81		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-TOUR ELIFT 42
Seiki	LC-46G82		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Seiki	SC391TS		LCD/Plasma	G-LCDCOVER-42	G-TOUR ELIFT 42			
Seiki	SC402TT	859259002460	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-TOUR ELIFT 42
Seiki	SC461TS	859259002095	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Seiki	SC462TC	859259002736	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Seiki	SC501GS		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Seiki	SC552GS		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Seiki	SC-552GS		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Seiki	SE401GS		LCD/Plasma	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-LCDCOVER-42	G-TOUR ELIFT 42
Seiki	SE421TT	859259002477	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Seiki	SE461TS		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Seiki	SE551GS	859259002309	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Selti	MPP-5010A		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Sennheiser	ew 172 G3	615104152601	Wireless System	GM-1W	GM-1WP	GM-2W	GM-7W-TSA	G-IN EAR SYSTEM
Sennheiser	EW115 G3	615104169746	Wireless System	GM-1W	GM-1WP	GM-2W	GM-7W-TSA	G-IN EAR SYSTEM
Sennheiser	EW135G2 E835		Wireless System	GM-1W	GM-1WP	GM-2W	GM-7W-TSA	G-IN EAR SYSTEM
Sennheiser	ew300IEM G3	615104156784	Wireless System	GM-1W	GM-1WP	GM-2W	GM-7W-TSA	G-IN EAR SYSTEM
Sharp	46D64U		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Sharp	AQUOS LC-52D62U		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52
Sharp	AQUOS LC52D64U		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52
Sharp	AQUOS LC-52D82U		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52
Sharp	LC-37H4U		LCD/Plasma	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-LCDCOVER-42	G-TOUR ELIFT 42
Sharp	LC-40E67U		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sharp	LC-40LE830U	074000373099	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-LCDCOVER-42	G-TOUR ELIFT 42
Sharp	LC-42D64U		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sharp	LC-42LE540U	074000373389	LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Sharp	LC-45GD4U		LCD/Plasma	G-LCD-4647	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sharp	LC-45GD6U		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Sharp	LC-46D64U		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Sharp	LC46D65U		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Sharp	LC46D85U		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Sharp	LC-46SV50U	074000373402	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Sharp	LC-52D62U		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Sharp	LC-52D64U		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Sharp	LC52D85U		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Sharp	LC-52D92U		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Sharp	LC-52LE640U	074000373501	LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Sharp	LC52LE830U	888294001404	LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Sharp	LC-52LE835U		LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Sharp	LCC4655U		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Sharp	LC-M3700		LCD/Plasma	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-LCDCOVER-42	G-TOUR ELIFT 42
Sharp	LC-PD50U		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Sharp	PG-A20X		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Sharp	PN455RU		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-42
Sharp	PN-E421	074000046931	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sharp	PN-E471R	074000046993	LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Sharp	PN-E521	074000046962	LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Sharp	PN-V601	074000047068	LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65
Shure	P2T	042406109017	Wireless System	GM-7W-TSA	G-IN EAR SYSTEM			
Shure	P9T		Wireless System	GM-1W	GM-1WEVA	GM-1WP	GM-2W	G-IN EAR SYSTEM
Shure	P9TR		Wireless System	GM-1W	GM-1WEVA	GM-1WP	GM-2W	G-IN EAR SYSTEM
Shure	P9TR425CL		Wireless System	GM-1W	GM-1WEVA	GM-1WP	GM-2W	G-IN EAR SYSTEM

Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Shure	P9TRA	042406232487	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
Shure	P9TRA425CL	042406232548	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
Shure	PG24/PG58		Wireless System	GM-1W	GM-4WR	GM-5W		
Shure	PG4	042406136860	Wireless System	GM-1W	GM-4WR	GM-5W		
Shure	PSM 900	042406172455	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
Shure	SLX24/Beta58	042406121293	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
Shure	SLX24/Beta87A	042406145978	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
Shure	SLX24/Beta87C	042406121453	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
Shure	SLX24/SM58	042406121118	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
Shure	SLX24/SM86	042406146005	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
Shure	SLX4	042406153737	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
Shure	ULXD24/B58	042406211697	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
Shure	ULXD24/B87A	042406213639	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
Shure	ULXD24/B87C		Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
Shure	ULXD24/SM58		Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
Shure	ULXD24/SM86	042406211673	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
Shure	ULXD24/SM87A	042406211680	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
Shure	ULXD4		Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-IN EAR SYSTEM
Softboard	501		LCD/Plasma	G-TOUR ELIFT 42				
Softboard	502		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCLDIFT55	G-TOUR ELIFT 55
Softboard	503		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCLDIFT55	G-TOUR ELIFT 55
Softboard	513		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Softboard	532		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sony	40V4100		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sony	BRAVIA KDL-46V2500		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Sony	Bravia KDL-52S5100		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCLDIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Sony	FWD32LX2F/B		LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
Sony	FWD32LX2F/S		LCD/Plasma	G-LCD-2632	G-TOURLCDP-2632			
Sony	FWD40LX2F/B		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sony	FWD40LX2F/S		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sony	FWD-42P11		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sony	FWD50PX2/B		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCLDIFT55	G-TOUR ELIFT 55
Sony	FWD-50PX2/S		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCLDIFT55	G-TOUR ELIFT 55
Sony	FWD50PX2/S		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCLDIFT55	G-TOUR ELIFT 55
Sony	FWD50PX2/S		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCLDIFT55	G-TOUR ELIFT 55
Sony	FWD542H1	027242754423	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sony	KDL-40BX450	027242838598	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sony	KDL-40EX640	027242838574	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURCLDIFT55	G-LCDCOVER-42	G-TOUR ELIFT 42
Sony	KDL-40SS504		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sony	KDL-40SS100		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sony	KDL-40V4100		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sony	KDL40XB86		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sony	KDL-46BX450	027242838581	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Sony	KDL-46EX500	027242784925	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCLDIFT55	G-TOUR ELIFT 47
Sony	KDL-46EX640	027242838567	LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Sony	KD-L46EX720		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 47
Sony	KDL-46HX750	027242838543	LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Sony	KDL46HX800		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
Sony	KDL-46HX820	888299002826	LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
Sony	KDL-46NX720		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
Sony	KDL-46S2000		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-LCDCOVER-52	G-TOUR ELIFT 47
Sony	KDL-46S4100		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-LCDCOVER-52	G-TOUR ELIFT 47
Sony	KDL-46S5100		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-LCDCOVER-52	G-TOUR ELIFT 47
Sony	KDL-46V4100		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCLDIFT55	G-TOUR ELIFT 47
Sony	KDL46V5100		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCLDIFT55	G-TOUR ELIFT 47
Sony	KDL-46V5100		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCLDIFT55	G-TOUR ELIFT 47
Sony	KDL-46XBR4		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCLDIFT55	G-TOUR ELIFT 55
Sony	KDL-46Z4100/B		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 47
Sony	KDL-52S5100		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCLDIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Sony	KDL-52V5100		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCLDIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Sony	KDL-52XBR9		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCLDIFT55	G-TOUR ELIFT 55
Sony	KDL-55BX520	027242830370	LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCLDIFT65	G-TOURCDP60	G-LCDCOVER-65
Sony	KDL55EX620	027242817036	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURCLDIFT55	G-TOUR ELIFT 55
Sony	KDL-55EX640	027242838550	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURCLDIFT55	G-TOUR ELIFT 55
Sony	KDL55EX720	027242816862	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURCLDIFT55	G-TOUR ELIFT 55
Sony	KDL55EX720		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURCLDIFT55	G-TOUR ELIFT 55
Sony	KDL55HX721		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCLDIFT65	G-TOURCDP60	G-LCDCOVER-65
Sony	KDL55HX729		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURCLDIFT55	G-TOUR ELIFT 55
Sony	KDL-55HX750	888299003090	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURCLDIFT55	G-TOUR ELIFT 55
Sony	KDL55NX720	027242816800	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURCLDIFT55	G-TOUR ELIFT 55
Sony	KDL60NX720		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURCLDIFT55	G-TOUR ELIFT 55
Sony	NSX-40GT1		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sony	PFM-42B1		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sony	PFM-42B2H		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sony	PFM-42B2U		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sony	PFM-42V1		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sony	PFM-42X1		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sony	PFM-50C1		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURCLDIFT55	G-TOUR ELIFT 55
Sony	PWD-42LX1/B		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Sony	SLVD380P		DJ CD Player	G-CLUB CDMX-12	G-CLUB CONTROL	G-TOUR TT1200		
Sony	SRP-X700		Digital Audio Gear	GXDF-1919-7-TSA	GXDF-1921-6-TSA	GXDF-2030-6-TSA	GU-2014-08-WPDF	GU-2217-08-WPDF
Sony	VPL-C57		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Sony	VPL-CX70		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Sony	VPL-CX75		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Sony	VPL-D5100		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Sony	VPL-E52		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Sony	VPL-EX1		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Sony	XBR-46HX929	027242816671	LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
Sony	XBR55HX929		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURCLDIFT55	G-TOUR ELIFT 55
Sony	XBR-55HX929	027242816657	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURCLDIFT55	G-TOUR ELIFT 55
Sound Devices	788T-SSD		Digital Audio Gear	G-BROADCASTER	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Soundcraft	EFX12	688705211046	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Soundcraft	EFX8	688705211015	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Soundcraft	EPM12	688705210438	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Soundcraft	EPM6	688705210278	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Soundcraft	EPM8	6887051126057	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222

Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Soundcraft	FX16		Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	FX16II	688705210940	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	FX8		Mixer	G-MIX-B1818	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Soundcraft	M4	688705207971	Mixer	G-MIX-B2118	G-MIX-L1622	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	M8	688705208046	Mixer	G-MIX-B2020	GMIX-1921-6-TSA	GMIX-2225-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	MFx 12		Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	MFx12		Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Soundcraft	MFxI 12/2	688705221359	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	MFxI 20/2	688705221373	Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-MIX24X36	G-TOUR20X25	G-TOUR20X30
Soundcraft	MFxI 8/2	688705221335	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Soundcraft	MFxI12	688705221359	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	MFxI20	688705221373	Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-MIX24X36	G-TOUR20X25	G-TOUR20X30
Soundcraft	MFxI8	688705221335	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Soundcraft	MPM12		Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Soundcraft	MPMi 12/2	688705211312	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	MPMi 12-2	688705211312	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	MPMi 20	688705221311	Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-MIX24X36	G-TOUR20X25	G-TOUR20X30
Soundcraft	MPMi 20/2	688705221311	Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-MIX24X36	G-TOUR20X25	G-TOUR20X30
Soundcraft	SI Compact 16		Mixer	G-MIX-B2519	GMIX-1921-8-TSA	GMIX-2225-8-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	SPIRIT E12		Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	SPIRIT E6		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	SPIRIT E8		Mixer	G-MIX-B1818	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	SPIRIT ES		Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	SPIRIT FX16		Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	SPIRIT FX8		Mixer	G-MIX-B1818	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Soundcraft	SPIRIT M12		Mixer	G-MIX-B2020	GMIX-1921-6-TSA	GMIX-2225-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	SPIRIT M4	688705207971	Mixer	G-MIX-B2118	G-MIX-L1622	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	SPIRIT M8	688705208046	Mixer	G-MIX-B2020	GMIX-1921-6-TSA	GMIX-2225-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	SX 12		Mixer	G-MIX-B2519	G-MIX-L1926	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	UREI 1601		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Soundtech	1604		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Squier	Affinity Series Telecaster Special	717669174538	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Squier	Affinity Stratocaster	717669352912	Electric Guitar	GL-Elec	GC-Elec-A	GPE-Elec-TSA	G-Tour Elec	GWE-Elec
Stanton	C.324	04929200619	DJ CD Player	G-TOUR CD 1000	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)		
Stanton	C-302		DJ CD Player	G-TOUR CD 1000	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)		
Stanton	C-303		DJ CD Player	G-TOUR CD 1000	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)		
Stanton	C313		DJ CD Player	G-TOUR CD 1000	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)		
Stanton	C314		DJ CD Player	G-TOUR CD 1000	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)		
Stanton	CMP.800	049292003771	DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	
Stanton	M.207	04929200879	DJ Mixer	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
Stanton	M.207	04929200879	DJ Mixer	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
Stanton	RM-3		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
Stanton	RM-3		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
Stanton	RM-35		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
Stanton	RM-35		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
Stanton	S.252		DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	
Stanton	S-250		DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	
Stanton	S300		DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	
Stanton	SA-12		DJ Mixer	G-CLUB CDMX-12	G-TOUR CD 2000	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)-ARM1-PL-MIX	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)-ARM1-PL-MIX	
Stanton	SA-12		DJ Mixer	G-CLUB CDMX-12	G-TOUR CD 2000	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)-ARM1-PL-MIX	
Stanton	SA-5		DJ Mixer	G-CLUB CDMX-10	G-CLUB CONTROL	G-TOUR MIX 10	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)
Stanton	SA-5		DJ Mixer	G-CLUB CDMX-10	G-CLUB CONTROL	G-TOUR MIX 10	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)
Stanton	SCS3	049292002484	DJ Controller	G-CLUB CDMX-10	G-CLUB CONTROL	G-TOUR CD 1000		
Stanton	SK-2		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD12	G-TOURCOF-LGCD12 (w	



Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Stanton	SK-2		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
Stanton	SK-2F		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
Stanton	SK-2F		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
Stanton	SK-6		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
Stanton	SK-6		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
Stanton	SK-6F		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
Stanton	SK-6F		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD12 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
Stanton	SK-ONE		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
Stanton	SK-ONE		DJ Mixer	G-CLUB CDMX-10	G-TOUR MIX 10	G-TOURCOF-SMCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	
StudioLogic	Acuna88		Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR-76V2SL	
StudioLogic	Numa		Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR 88V2	GKC-1648
StudioLogic	Numa Nero	8034141640278	Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR 88V2	GKC-1648
StudioLogic	SL880PRO		Keyboard	GKB-88 SLIM	GK-88 SLIM	GKPE-88SLIM-TSA	G-TOUR-88V2SL	
StudioLogic	SL-990PRO	093018802001	Keyboard	GKB-88 SLIM	GK-88 SLIM	GKPE-88SLIM-TSA	G-TOUR-88V2SL	
StudioLogic	Sledge		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
StudioLogic	VMK-161+	093018822009	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
StudioLogic	VMK-161+ORGAN		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Studiomaster	CSX		Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Studiomaster	VPX12		Speaker	GPA-5CVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-PA TRANSPORT-SM
Suzuki	SP-37		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Suzuki	SP-67		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
SVA	HD4208T11		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Takamine	G320		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Takamine	G340	736021836457	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Takamine	G3605	736021839045	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Takamine	G5330-S	736021485273	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Takamine	Jasmine S35	736021469037	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Tapco	MIX220FX		Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Tapco	MIX260FX		Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Tascam	414 MKII		Digital Audio Gear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1510-06-WPDF	G-TOURCARRYONFO
Tascam	CD-D4000 MKII		DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000			
Tascam	CD-RW 2000		DJ CD Player	G-CLUB CONTROL 25				
Tascam	CD-RW 700		DJ CD Player	G-CLUB CONTROL 25				
Tascam	DP-01		Digital Audio Gear	GX-1818-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	GU-1813-06-WPDF	G-TOURCARRYONFO
Tascam	DP-01FXCD		Digital Audio Gear	GX-1818-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	GU-1813-06-WPDF	G-TOURCARRYONFO
Tascam	DP-02		Digital Audio Gear	G-CLUB-CONTROL	GX-1818-6-TSA	GXDF-1919-7-TSA	GU-1711-06-WPDF	G-TOURCARRYONFO
Tascam	DP-02CF	043774022823	Digital Audio Gear	G-CLUB-CONTROL	GX-1818-6-TSA	GXDF-1919-7-TSA	GU-1711-06-WPDF	G-TOURCARRYONFO
Tascam	DP-02FX/CD		Digital Audio Gear	G-CLUB-CONTROL	GX-1818-6-TSA	GXDF-1919-7-TSA	GU-1711-06-WPDF	G-TOURCARRYONFO
Tascam	DP-03	043774026371	Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Tascam	FIREONE		Digital Audio Gear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Tascam	FW-1082		Digital Audio Gear	GX-1921-6-TSA	GXDF-1921-6-TSA	GXDF-2030-6-TSA	GXDF-2225-6-TSA	GU-2217-08-WPDF
Tascam	HD-P2	043774020362	Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF
Tascam	M-164UF		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Tascam	MD-301RMKII		Digital Audio Gear	G-MULTIFX-2411	GXDF-1919-7-TSA	GXDF-1921-6-TSA	GU-2014-08-WPDF	G-TOURCARRYONFO
Tascam	PORTA 02		Digital Audio Gear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Tascam	PORTA 02MKII		Digital Audio Gear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Tascam	US-428		Digital Audio Gear	G-CLUB-CONTROL	GX-1818-6-TSA	GXDF-1919-7-TSA	G-TOURCARRYONFO	
Tatun	P42B5MT		LCD/Plasma	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-LCDCOVER-42	G-TOUR ELIFT 42
Tatun	P46T		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Taylor	110e	841060044968	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Taylor	210e	841060045071	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Taylor	410ce	841060008093	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Taylor	Big Baby	841060045255	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
TC Electronic	G-SYSTEM	5706622007117	Digital Audio Gear	G-MULTIFX-2411	GXDF-1224-8	GXDF-2030-6-TSA	GU-2217-08-WPDF	
TC Electronic	Impact Twin	5706622009890	Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GXDF-1116-5-TSA	GU-1309-06-WPDF	
TC Electronic	Konnekt 24D		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GXDF-1116-5-TSA	GU-1309-06-WPDF	
TC Electronic	Konnekt Live		Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GXDF-1116-5-TSA	GU-1309-06-WPDF	
TC Helicon	VoiceLive 2	5706622009418	Digital Audio Gear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	GU-1510-06-WPDF
TC Helicon	VoiceLive 2	5706622009418	Digital Audio Gear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	GU-1510-06-WPDF
TCL	L40FHPD60	846042000505	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
TCL	LE40FHPD21TA		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
TCL	LE42FHDE5300	846042000475	LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
TCL	LE43FHDF3300	846042000260	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-LCDCOVER-42	G-TOUR ELIFT 42
TCL	LE46FHPD21TA		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
Thomson	42HT93PU		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Thomson	42WS90E3		LCD/Plasma	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-LCDCOVER-42	G-TOUR ELIFT 42
Thomson	42WS93E		LCD/Plasma	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOURLCDLIFT55	G-LCDCOVER-42	G-TOUR ELIFT 42
TL Audio	FAT TRACK		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Topaz	S18-4		Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Toshiba	40E220U	022265053805	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Toshiba	40RV525U		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Toshiba	40SL412U		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Toshiba	40XV645U		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Toshiba	42L6200U	022265062005	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Toshiba	42TL515U	022265004418	LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Toshiba	42WP27B		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Toshiba	46G310U	22265004296	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Toshiba	46L5200U	022265054802	LCD/Plasma	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Toshiba	46SL412U		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOUR ELIFT 47	G-LCDCOVER-52



Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Toshiba	46XV540U		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Toshiba	46XV645U		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Toshiba	47L6200U	022265061954	LCD/Plasma	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Toshiba	47L7200U		LCD/Plasma	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Toshiba	47TL515U	022265004425	LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
Toshiba	47ZV650U		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Toshiba	50HP66		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Toshiba	50L2200U	022265065808	LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 47
Toshiba	50L5200U	022265062609	LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 47
Toshiba	50WP27B		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Toshiba	55L6200U	022265055403	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Toshiba	55L7200U		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Toshiba	55SL417U		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Toshiba	55TL515U		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Toshiba	TDP-S20U		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	G-TOURCARRYONPL		
Trace Elliot	TA300	014367153576	Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Traynor	DG30D		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Traynor	DG60R		Amp/Cabinet	G-112A	G-TOUR AMP112	G-212-ROTO		
Traynor	DHX12		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Traynor	YCS50		Amp/Cabinet	G-TOUR AMP112	G-212A	G-TOUR AMP212		
Traynor	YCV40		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Traynor	YCV40WR		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Traynor	YCV50B		Amp/Cabinet	G-112A	G-112-ROTO	G-TOUR AMP112		
Traynor	YCV80		Amp/Cabinet	G-212A	G-212-ROTO	G-TOUR AMP212		
Turbosound	NuQ-10		Speaker	GPA-450-515	GPA-712SM	GPA-777	G-TOUR SPKR-2K10	
Turbosound	NuQ-10DP		Speaker	GPA-450-515	GPA-712SM	GPA-777	G-TOUR SPKR-2K10	
Turbosound	NuQ-12		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212
Turbosound	NuQ-12DP		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212
TVLogic	LUM-560W		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT65	G-LCDCOVER-65	
Universal	42		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Universal	MVP 2420		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Vestax	CDX-05		DJ CD Player	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)	
Vestax	PMC-007		DJ Mixer	G-TOUR MIX 10	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)			
Vestax	PMC-05PRO III		DJ Mixer	G-TOUR MIX 12	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)			
Vestax	PMC-05PRO SL		DJ Mixer	G-TOUR MIX 12	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)			
Vestax	PMC-07		DJ Mixer	G-TOUR MIX 12	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)			
Vestax	PMC07PRO		DJ Mixer	G-TOUR MIX 12	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)			
Vestax	PMC-37 PRO		DJ Mixer	G-TOUR CD 2000	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)			
Vestax	Typhoon		DJ Controller	G-CLUB CDMX-10	G-CLUB CONTROL	G-TOUR CD 1000	G-TOUR VTYPH	
Vestax	VCI-100	4516184210495	DJ Controller	G-CLUB CDMX-10	G-CLUB CONTROL	G-TOUR CD 1000	G-TOURCOF-LGCD10 (w or w/out ARM1-PL)	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)
Vestax	VCM-600		DJ Controller	G-CLUB CONTROL	G-TOUR VMS4	G-TOUR VMS4K	G-TOUR VMS4-ARM1-PL	
Vestax	VMC-002	4516184212185	DJ Mixer	G-CLUB CDMX-10	G-TOUR CD 1000	G-TOUR MIX 12		
Vestax	VMC-185		DJ Mixer	G-CLUB CDMX-12	G-TOUR TT1200	G-TOURCOF-LGCD12 (w or w/out ARM1-PL)		
Viewsonic	CINE1000		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Viewsonic	N4290P		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Viewsonic	N4785P		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 47
Viewsonic	PJ400		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Viewsonic	PJ452		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Viewsonic	PJ506D		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Viewsonic	PJ766D		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Viewsonic	VPW-425		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Viewsonic	VPW-425S		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Viewsonic	VPW-450WD		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Viewsonic	VPW-505		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 55	G-LCDCOVER-52
Viewsonic	VT4210LED		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Viewsonic	VT4236LED	766907625615	LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Vivitek	D825MX		Projector	GAV-PROJECTOR-SM	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	G-TOURCARRYONPL
Vizio	E3D420VX	845226005077	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Vizio	E3D470VX	845226005091	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Vizio	E420VA	845226003615	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Vizio	E421VO	845226005381	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Vizio	E422AR	845226006890	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Vizio	E422VA		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Vizio	E422VLE	845226006708	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Vizio	E460ME		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 47
Vizio	E470VL		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Vizio	E470VLE		LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Vizio	E472VLE	845226006715	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47	G-LCDCOVER-52
Vizio	M3D420SR		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOUR LCD 42	G-TOUR LCD 42
Vizio	M3D460SR		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
Vizio	M3D470KD		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
Vizio	M3D550KD	845226007057	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Vizio	M3D550SL		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Vizio	M3D550SR		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Vizio	M420SL	845226006784	LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Vizio	M420SV		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Vizio	M421NV		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
Vizio	M470NV		LCD/Plasma	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55

Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Vizio	M4705L		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
Vizio	M5505L	845226006807	LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Vizio	XV13D4745V	845226003240	LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOUR ELIFT 47	G-LCDCOVER-52
Vizio	XVT4235V		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Vocalist	VLS		Digital Audio Gear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1510-06-WPDF	G-TOURCARRYONFO
Voodoo Lab	Ground Control Pro	813140003011	Digital Audio Gear	G-MULTIFX-2411	GX-1818-6-TSA	GXDF-1919-7-TSA	GU-1711-06-WPDF	G-TOURCARRYONFO
Washburn	C40N	801128716916	Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Washburn	C40S	801128000350	Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Washburn	C80S	801128000374	Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Washburn	D10Q5B	801128011547	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Washburn	D10S12		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Washburn	D30S		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Washburn	D525W		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Washburn	WD10	801128719641	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Washburn	WD325W		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Westinghouse	CW40T6DW	882777068700	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Westinghouse	EW46T4LZ	882777067901	LCD/Plasma	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Westinghouse	LD-4055		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Westinghouse	LD-4065		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Westinghouse	LD-4070Z		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Westinghouse	LD-4255VX		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Westinghouse	LD-4258		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Westinghouse	LD-4655VX		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
Westinghouse	LD-4680		LCD/Plasma	G-LCD-4647	G-LED-3747-2X	G-TOURLCD5055	G-TOURLCD5055X2	G-TOUR ELIFT 47
Westinghouse	LD-5880Z		LCD/Plasma	G-LCD-5052	G-LED-5055-2X	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Westinghouse	UW40T3PW		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Westinghouse	VR-5535Z	882777066508	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55
Westinghouse	VR-5585DFZ		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-TOUR ELIFT 55	G-LCDCOVER-52
Wharfedale	R-2004FX		Digital Audio Gear	GX-1818-6-TSA	GX-1921-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	GXDF-2225-6-TSA
Wharfedale	TITAN 12		Speaker	GPA-SCVR450-515	GPA-450-515	GPA-7125M	GPA-777	
Williams	ENCORE		Keyboard	GKB-88 SLX	GK-88 SLX	GKPE-88SLX-TSA	G-TOUR-88V25L	
Yamaha	01V		Mixer	G-MIX-B2519	G-MIX-L1822	GMIX-2030-6-TSA	G-MIX20X25	GMC-2222
Yamaha	01V96		Mixer	G-MIX-B2519	G-MIX-L1822	GMIX-2030-6-TSA	G-MIX20X25	GMC-2222
Yamaha	01V96i	086792963105	Mixer	G-MIX-B2519	G-MIX-L1822	GMIX-2030-6-TSA	G-MIX20X25	GMC-2222
Yamaha	01V96VCM		Mixer	G-MIX-B2519	G-MIX-L1822	GMIX-2030-6-TSA	G-MIX20X25	GMC-2222
Yamaha	01X		Digital Audio Gear	GX-1818-6-TSA	GX-1921-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	GXDF-2225-6-TSA
Yamaha	9000 Pro		Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Yamaha	AW2400		Mixer	G-MIX-B2123	GMIX-2030-6-TSA	GMIX-2030-8-TSA	G-MIX20X25	GMC-2222
Yamaha	BR10	086792825069	Speaker	GPA-SCVR450-515	GPA-450-515	GPA-7125M	GPA-777	
Yamaha	BR12	086792825076	Speaker	GPA-SCVR450-515	GPA-450-515	GPA-7125M	GPA-777	G-TOUR SPKR-212
Yamaha	CI12V	086792729121	Speaker	GPA-SCVR450-515	GPA-712L6	GPA-777	G-TOUR SPKR-212	G-PA TRANSPORT-SM
Yamaha	CG Series		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Yamaha	CG101A		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Yamaha	CG111C		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Yamaha	CG111S		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Yamaha	CG151C		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Yamaha	CG171S		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Yamaha	CG1715F		Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Yamaha	CG5102	086792637211	Acoustic Guitar	GL-Classic	GC-Classic	GPE-Classic-TSA	GWE-Class	GW-Classic
Yamaha	CM12V	086792729169	Speaker	GPA-SCVR450-515	GPA-712L6	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
Yamaha	DGX203		Keyboard	GKB-76	GK-76	GKPE-76D-TSA	G-TOUR 76V2	GKC-1648
Yamaha	DGX230	086792880310	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Yamaha	DGX620		Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR 88V2	GKC-1648
Yamaha	DGX640	086792940724	Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR 88V2	GKC-1648
Yamaha	DSR112	086792948768	Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712L6	GPA-777	G-TOUR SPKR-212
Yamaha	DXR12	086792961781	Speaker	GPA-SCVR450-515	GPA-450-515	GPA-7125M	GPA-777	G-TOUR SPKR-212
Yamaha	EMX 5014C	086792838274	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-8-TSA	G-MIX19X21	G-TOUR19X21
Yamaha	EMX 5016CF	086792856216	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-8-TSA	G-MIX19X21	G-TOUR19X21
Yamaha	EMX2000		Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Yamaha	EMX3000		Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Yamaha	EMX5016CF	086792856216	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-8-TSA	G-MIX19X21	G-TOUR19X21
Yamaha	EZ150		Keyboard	GK-49	GKPE-61-TSA	G-TOUR-61V25L	G-TOUR 61V2	GKC-1540
Yamaha	EZ200	086792304458	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V25L	GKC-1540
Yamaha	EZ220	086792963136	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V25L	GKC-1540
Yamaha	F335	086792829937	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Yamaha	F345		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Yamaha	FD01S	086792284231	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Yamaha	FG700S	086792829968	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Yamaha	FG720S	086792829616	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Yamaha	FG730S	086792829029	Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Yamaha	FG735S		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Yamaha	FG750S		Acoustic Guitar	GL-Dread-12	GC-Dread-12	GPE-Dread-TSA	G-Tour Dread-12	GW-Dread
Yamaha	KX61		Keyboard	GK-49	GKPE-61-TSA	G-TOUR-61V25L	GKC-1540	
Yamaha	KX8		Keyboard	GKB-88	GKPE-88-TSA	G-TOUR 88V2	GKC-1648	
Yamaha	MD4S		Digital Audio Gear	GX-1818-6-TSA	GX-1921-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	GXDF-2225-6-TSA
Yamaha	MD8		Digital Audio Gear	GX-1921-6-TSA	GXDF-1921-6-TSA	GXDF-2030-6-TSA	GXDF-2225-6-TSA	GU-2217-08-WPDF
Yamaha	MG12/4		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Yamaha	MG12/4 FX		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Yamaha	MG124C	086792859361	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Yamaha	MG124CX	086792859378	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Yamaha	MG16/4		Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Yamaha	MG16/6FX		Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Yamaha	MG166C	086792866314	Mixer	G-MIX-B2020	GMIX-1921-6-TSA	GMIX-2225-6-TSA	G-MIX19X21	G-TOUR19X21
Yamaha	MG166CX	086792866291	Mixer	G-MIX-B2020	GMIX-1921-6-TSA	GMIX-2225-6-TSA	G-MIX19X21	G-TOUR19X21
Yamaha	MG166CX-USB	086792866284	Mixer	G-MIX-B2020	GMIX-1921-6-TSA	GMIX-2225-6-TSA	G-MIX19X21	G-TOUR19X21
Yamaha	MG206C	086792866277	Mixer	G-MIX-B2020	GMIX-1921-6-TSA	GMIX-2225-6-TSA	G-MIX19X21	G-TOUR19X21
Yamaha	MG206C-USB	086792866260	Mixer	G-MIX-B2020	GMIX-1921-6-TSA	GMIX-2225-6-TSA	G-MIX19X21	G-TOUR19X21
Yamaha	MM1242		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Yamaha	MM1402		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Yamaha	MM6	086792858098	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V25L	GKC-1540
Yamaha	MO6		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Yamaha	MOTIF ES6		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Yamaha	MOTIF ES7		Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Yamaha	MOTIF XF6	086792941806	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Yamaha	MOTIF XF7	086792941820	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Yamaha	MOTIF XS6		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Yamaha	MOTIF XS7		Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648

Manufacturer	Model	UPC	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Yamaha	MOTIF6		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Yamaha	MOX6	086792950884	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Yamaha	MSR250	086792881904	Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712SM	GPA-777	
Yamaha	MSR400	086792831343	Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
Yamaha	MW12 USB		Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Yamaha	MX12/4		Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Yamaha	MX12/6		Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Yamaha	MX20/6		Mixer	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X30	G-TOUR20X25	G-TOUR20X30
Yamaha	MX200-12		Mixer	G-MIX-B2519	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X25	GMC-2222
Yamaha	MX200-16		Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-MIX24X36	G-TOUR20X25	G-TOUR20X30
Yamaha	MX200-8		Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Yamaha	N8	086792859927	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Yamaha	NP-V80	086792939469	Keyboard	GKB-76	GK-76-SLIM	GKPE-76-TSA	G-TOUR-76V2SL	
Yamaha	NP-V80	086792939469	Keyboard	GKB-76	GK-76-SLIM	GKPE-76-TSA	G-TOUR-76V2SL	
Yamaha	P120		Keyboard	GKB-88 SLIM	GK-88 SLIM	GKPE-88SLIM-TSA	G-TOUR-88V2SL	
Yamaha	P120S		Keyboard	GKB-88 SLIM	GK-88 SLIM	GKPE-88SLIM-TSA	G-TOUR-88V2SL	
Yamaha	P140		Keyboard	GKB-88 SLIM	GK-88 SLIM	GKPE-88SLIM-TSA	G-TOUR-88V2SL	
Yamaha	P-150		Keyboard	GKB-88	GKPE-88-TSA	G-TOUR 88V2	GKC-1648	
Yamaha	P-155	086792898889	Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR 88V2	GKC-1648
Yamaha	P60		Keyboard	GKB-88 SLIM	GK-88 SLIM	GKPE-88SLIM-TSA	G-TOUR-88V2SL	
Yamaha	P60S		Keyboard	GKB-88 SLIM	GK-88 SLIM	GKPE-88SLIM-TSA	G-TOUR-88V2SL	
Yamaha	P-70		Keyboard	GKB-88 SLIM	GK-88 SLIM	GKPE-88SLIM-TSA	G-TOUR-88V2SL	
Yamaha	P90		Keyboard	GKPE-88-TSA	G-TOUR 88V2	G-TOUR 88V2XL	GKC-1648	
Yamaha	PDM-1		LCD/Plasma	G-TOURLCD5055	G-TOURLCD5055X2	G-TOURLCDLIFT55	G-LCDCOVER-52	G-TOUR ELIFT 55
Yamaha	PF15		Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR 88V2	GKC-1648
Yamaha	PSR E423	086792939506	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Yamaha	PSR-293		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Yamaha	PSR-A2000	086792958019	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Yamaha	PSR-E203		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Yamaha	PSR-E213		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Yamaha	PSR-E223		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Yamaha	PSR-E233	086792944654	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Yamaha	PSR-E233	086792944654	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Yamaha	PSR-E303		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Yamaha	PSR-E323		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Yamaha	PSR-E333	086792944777	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Yamaha	PSR-E333	086792944777	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Yamaha	PSR-E403		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Yamaha	PSR-E413		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Yamaha	PSR-E423	086792939506	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Yamaha	PSR-E433	086792964706	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Yamaha	PSR-OR700		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Yamaha	PSR-S500		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Yamaha	PSR-S550BK		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Yamaha	PSR-S650	086792944586	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Yamaha	PSR-S700		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Yamaha	PSR-S710	086792931784	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Yamaha	PSR-S900		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Yamaha	PSR-S910	086792931753	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Yamaha	S08		Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR 88V2	GKC-1648
Yamaha	S112V	086792728131	Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-PA TRANSPORT-SM
Yamaha	SML12V	086792728179	Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
Yamaha	STAGEPAS 500	086792856735	Speaker	GPA-SCVR450-515	GPA-450-515	GPA-712SM	GPA-777	
Yamaha	SV77		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Yamaha	TYROS2		Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Yamaha	TYROS3		Keyboard	GKB-76	GK-76	GKPE-76D-TSA	G-TOUR 76V2	GKC-1648
Yamaha	Tyros4	086792326368	Keyboard	GKB-76	GK-76	GKPE-76D-TSA	G-TOUR 76V2	GKC-1648
Yamaha	YPG225		Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Yamaha	YPG-235	086792880334	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR 76V2	GKC-1648
Yamaha	YPG525		Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR 88V2	GKC-1648
Yamaha	YPG625		Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR 88V2	GKC-1648
Yamaha	YPT-200		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Yamaha	YPT-220	086792899558	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Yamaha	YPT-310		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR-61V2SL	GKC-1540
Yamaha	YPT-400		Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR 61V2	GKC-1540
Yorkville	APB12		Mixer	G-MIX-B2519	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X25	G-TOUR20X25
Yorkville	APB18		Mixer	G-MIX-B2519	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X25	G-TOUR20X25
Yorkville	LS200P		Speaker	GPA-715	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215	
Yorkville	MAX16		Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-MIX24X36	G-TOUR20X25	G-TOUR20X30
Yorkville	NX200S		Speaker	GPA-715	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215	
Yorkville	NX25P		Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
Yorkville	NX35		Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
Yorkville	NX55P		Speaker	GPA-SCVR450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	G-TOUR SPKR-215
Yorkville	PM16		Mixer	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X30	G-TOUR20X25	G-TOUR20X30
Yorkville	TL8C		Speaker	GPA-SCVR450-515	GPA-712SM	GPA-777	G-TOUR SPKR-212	
Yorkville	TX2M		Speaker	GPA-450-515	GPA-712LG	GPA-777	G-TOUR SPKR-212	
Zenith	P42W22B		LCD/Plasma	G-TOURLCD-3743T	G-TOURLCD3743X2	G-LCDCOVER-42	G-TOUR ELIFT 42	
Zenith	P42W24B/P		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Zenith	P42W34/34H		LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Zenith	P42W46X		LCD/Plasma	G-LCD-4647	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42	G-LCDCOVER-42
Zenith	P50W28B		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55	
Zenith	P50W38/38H		LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT55	G-TOUR ELIFT 55	
Zenith	Z42LC6DF		LCD/Plasma	G-LCD-4042	G-LED-3747-2X	G-TOURLCD-3743T	G-TOURLCD3743X2	G-TOUR ELIFT 42
Zoom	A2.1u	884354006181	Digital Audio Gear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Zoom	B2.1u	884354006082	Digital Audio Gear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF	
Zoom	G7		Digital Audio Gear	G-MULTIFX-2411	G-CLUB-CONTROL	GU-2014-08-WPDF	GU-2217-08-WPDF	G-TOURCARRYONFO
Zoom	G7.1UT	884354006242	Digital Audio Gear	G-MULTIFX-2411	G-CLUB-CONTROL	GU-2014-08-WPDF	GU-2217-08-WPDF	G-TOURCARRYONFO
Zoom	MRS1044		Digital Audio Gear	G-MULTIFX-2411	GX-1818-6-TSA	GXDF-1919-7-TSA	GU-1711-06-WPDF	G-TOURCARRYONFO
Zoom	MRS1608CD		Digital Audio Gear	GX-1921-6-TSA	GX-2225-6-TSA	GXDF-1921-6-TSA	GXDF-2030-6-TSA	GXDF-2225-6-TSA
Zoom	MRS802BCD		Digital Audio Gear	G-MULTIFX-2411	GX-1818-6-TSA	GXDF-1919-7-TSA	GU-1711-06-WPDF	G-TOURCARRYONFO
Zoom	R16	884354008192	Digital Audio Gear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1510-06-WPDF	G-TOURCARRYONFO
Zoom	R16	884354008192	Digital Audio Gear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1510-06-WPDF	G-TOURCARRYONFO
Zoom	R24	884354009403	Digital Audio Gear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1510-06-WPDF	G-TOURCARRYONFO
Zoom	R8	884354009977	Digital Audio Gear	G-TABLETMIX-BAG	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA	GU-1309-06-WPDF

This list is intended as a guide; not a substitute for testing the actual fit of an instrument. All product information referenced above is based on the manufacturer's published specifications. These specifications may change over time and without notice. If you have questions on a specific case or product, or see that a correction is needed, please contact Gator Customer Service at 813.221.4191 or send us an email at info@gatorcases.com.